(4) Install the shift sector support (Fig. 76). Tighten the sector support to 27-42 N·m (20-30 ft.lbs.).

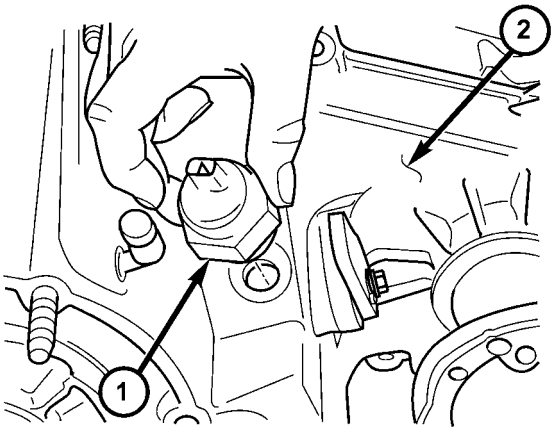


80f62486

***Fig. 75 Install Transfer Case Position Sensor***

1 - TRANSFER CASE POSITION SENSOR
2 - TRANSFER CASE

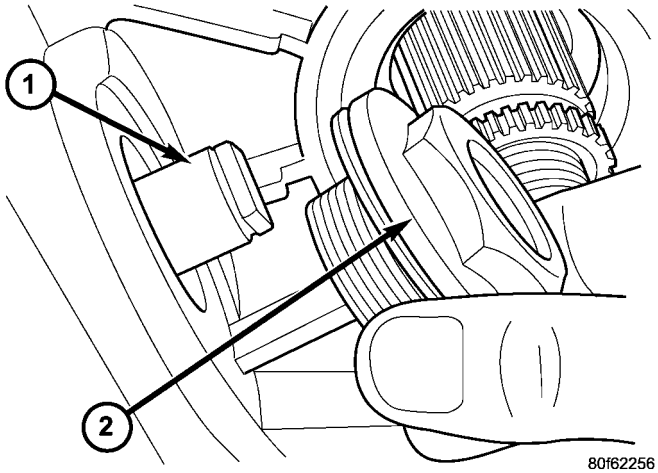


80f62256

***Fig. 76 Shift Sector Support Installation***

1 - SHIFT SECTOR SHAFT
2 - SECTOR SUPPORT

(5) Install detent plunger and spring into the front case half. (Fig. 77).

(6) Install new o-ring on detent plug and install plug in front case (Fig. 77). Tighten plug to 16-25 N·m (12-18 ft. lbs.).

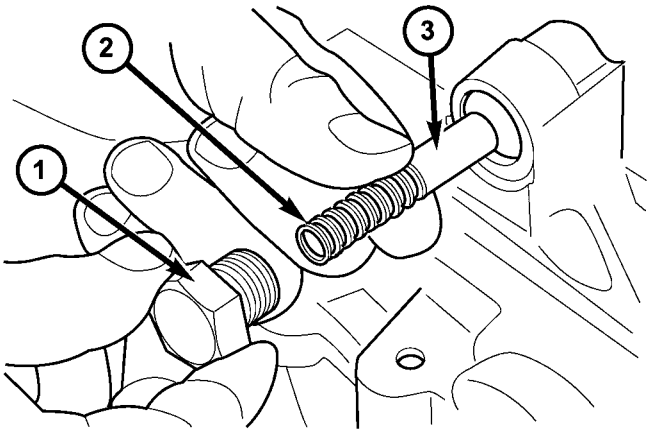


80f62246

***Fig. 77 Detent Plug, Spring, and Plunger Installation***

1 - DETENT PLUG
2 - SPRING
3 - PLUNGER

(7) Install shift lever onto the sector shaft (Fig. 78).

(8) Install the shift lever bolt (Fig. 79). Tighten the bolt to 20-34 N·m (15-25 ft.lbs.)

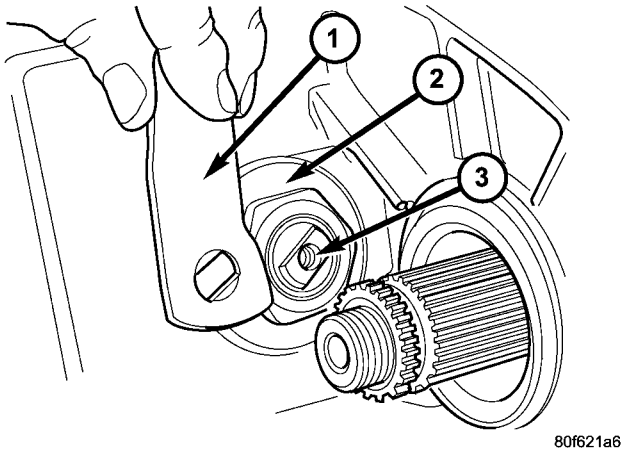


80f621a6

***Fig. 78 Shift Lever Installation***

1 - SHIFT LEVER
2 - SECTOR SUPPORT
3 - SHIFT SECTOR