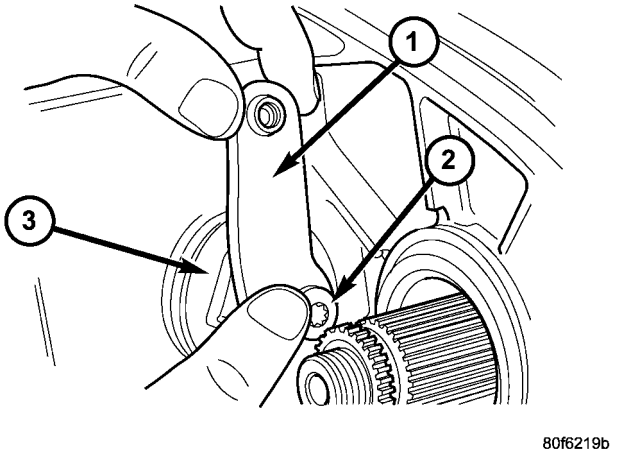

Fig. 79 Shift Lever Bolt Installation

1 - SHIFT LEVER
2 - BOLT
3 - SECTOR SUPPORT

(9) Shift the transfer case into a 4WD range. This will raise the mainshaft slightly and make installation of the rear case half much easier.

(10) Verify that the transfer case alignment dowels are properly installed.

(11) Apply bead of Mopar® Gasket Maker, or equivalent, to mating surface of front case. Keep sealer bead width to maximum of 3/16 inch. Do not use excessive amount of sealer as excess will be displaced into case interior.

(12) Align oil pump with mainshaft and align shift rail with bore in rear case. Then install rear case and oil pump assembly (Fig. 80). Be sure oil pickup tube remains in position during case installation.

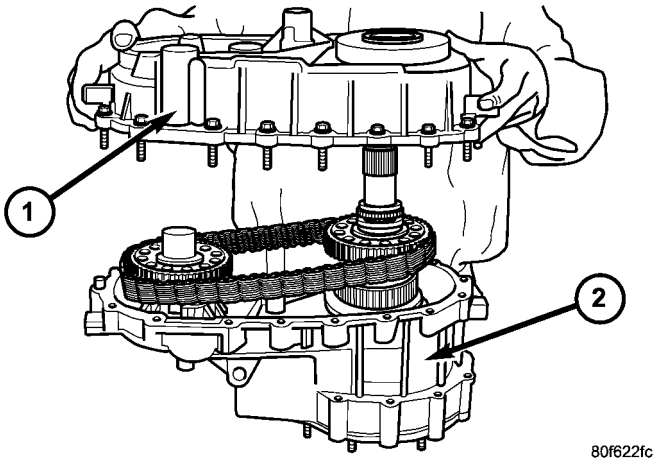

Fig. 80 Rear Case Half Installation

1 - REAR CASE HALF
2 - FRONT CASE HALF

(13) Install 4-5 rear case-to-front case bolts to hold rear case in position. Tighten bolts snug but not to specified torque at this time.

CAUTION: Verify that shift rail, and case alignment dowels (Fig. 81) are seated before installing any bolts. Case could be cracked if shaft rail or dowels are misaligned.

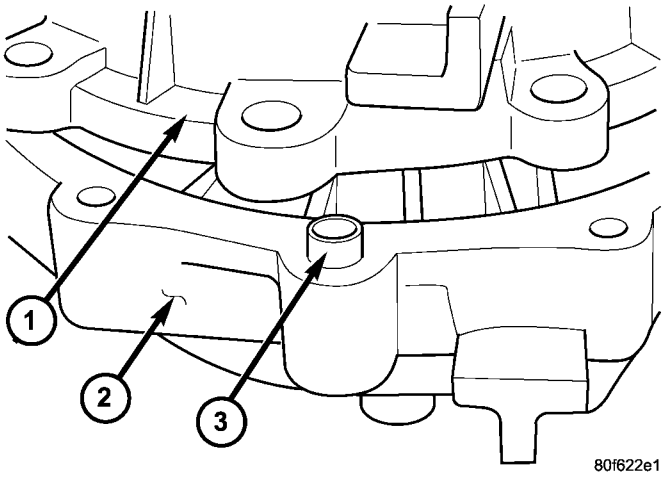

Fig. 81 Case Alignment Dowel

1 - REAR CASE HALF
2 - FRONT CASE HALF
3 - ALIGNMENT DOWEL

(14) Apply Loctite™ 242 to remainder of rear case-to-front case bolt threads and install bolts (Fig. 82). Tighten all bolts to 20-27 N·m (15-20 ft. lbs.).

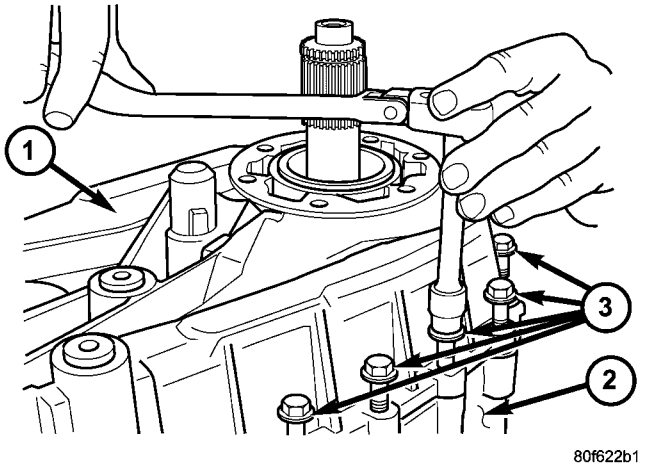

Fig. 82 Case Half Bolt Installation

1 - REAR CASE HALF
2 - FRONT CASE HALF
3 - BOLTS

YOKE

(1) Install yoke seal onto front shaft (Fig. 83).