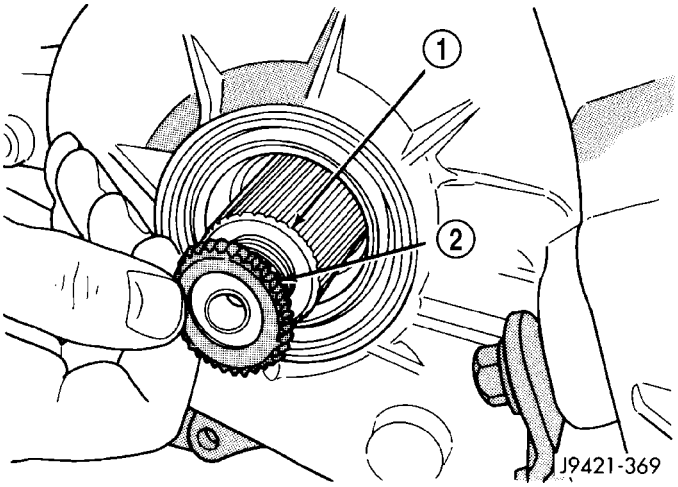


Fig. 83 Installing Flange Seal On Front Shaft

1 - FRONT OUTPUT SHAFT
2 - FLANGE SEAL

(2) Install yoke onto front shaft (Fig. 84). Then install and tighten a new yoke nut to 122-176 N·m (90-130 ft. lbs.) torque. Never re-use a yoke nut.

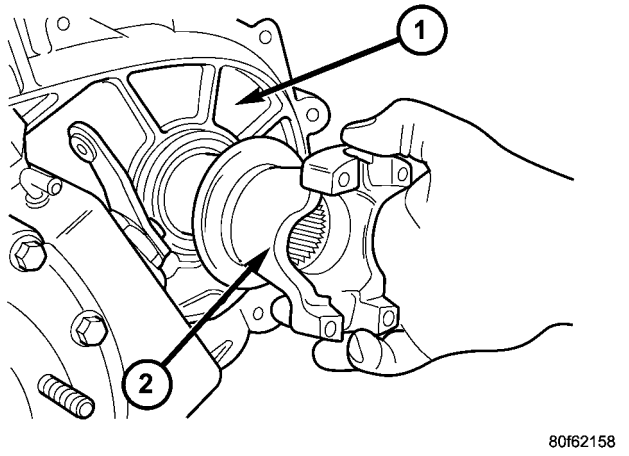


Fig. 84 Front Yoke Installation

1 - TRANSFER CASE
2 - FRONT YOKE

REAR EXTENSION

(1) Clean mating surfaces of transfer case housing and the rear retainer of any original gasket material.

(2) Apply bead of Mopar® Gasket Maker, or equivalent, to mating surface of rear case. Keep sealer bead width to maximum of 3/16 inch. Do not use excessive amount of sealer as excess will be displaced into case interior.

(3) Install the tone wheel dowel pin (Fig. 85) into the output shaft.

(4) Install the speedometer sensor tone wheel (Fig. 86) onto the output shaft with the notch in the tone wheel inner diameter toward the front of the transfer case. Make sure the notch fits over the dowel pin in the output shaft and the tone wheel is against the rear output shaft bearing inner race.

(5) Align and install rear extension on rear case (Fig. 87).

(6) Apply Mopar® Silicone Sealer to threads of rear extension bolts. Then install extension bolts (Fig. 88). Tighten the extension bolts to 16-25 N·m (12-18 ft.lbs.).

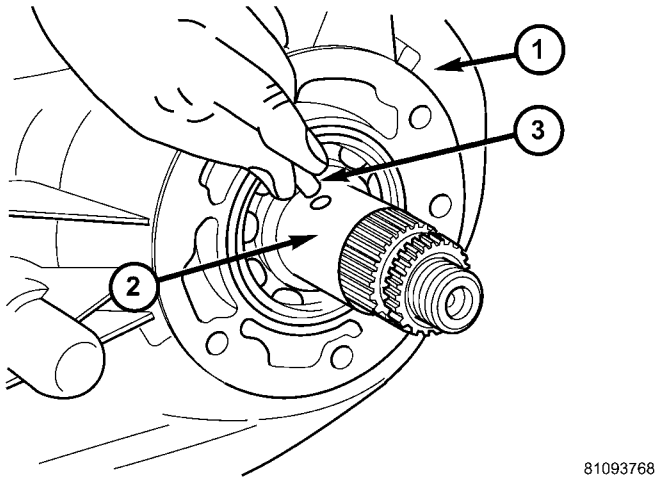


Fig. 85 Output Shaft Dowel Pin

1 - TRANSFER CASE
2 - OUPUT SHAFT
3 - DOWEL PIN

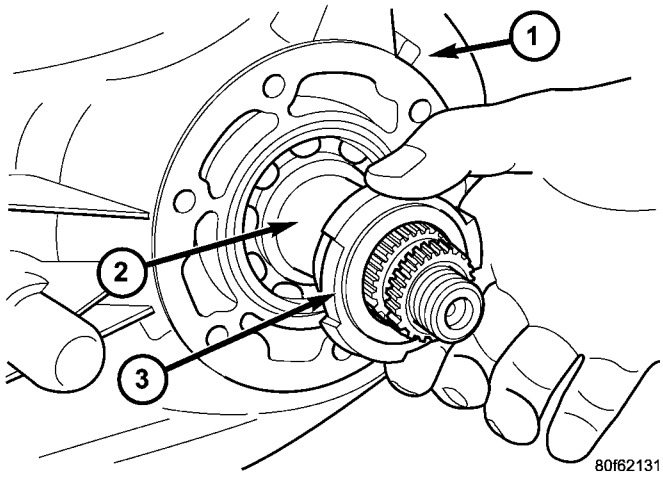


Fig. 86 Speedometer Sensor Tone Wheel Installation

1 - TRANSFER CASE
2 - OUPUT SHAFT
3 - SENSOR TONE WHEEL