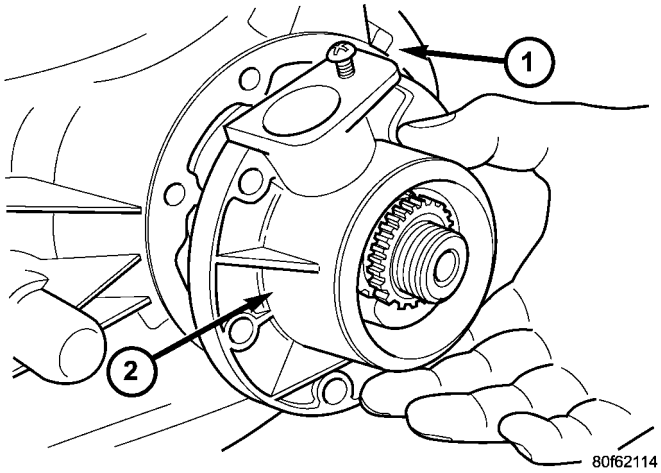

Fig. 87 Rear Extension Installation

1 - TRANSFER CASE
2 - EXTENSION HOUSING

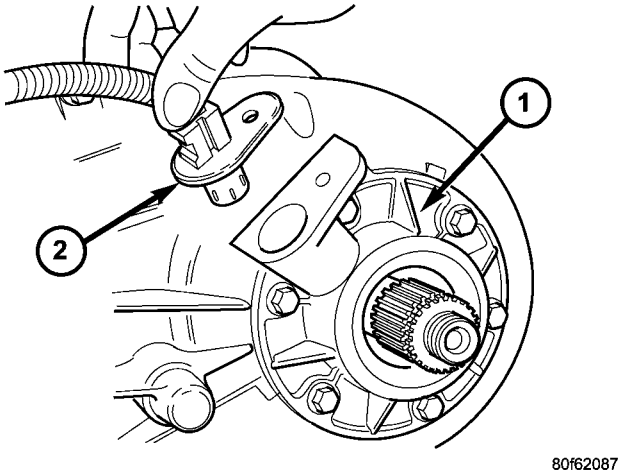

Fig. 89 Speedometer Sensor Installation

1 - EXTENSION HOUSING
2 - SPEEDOMETER SENSOR

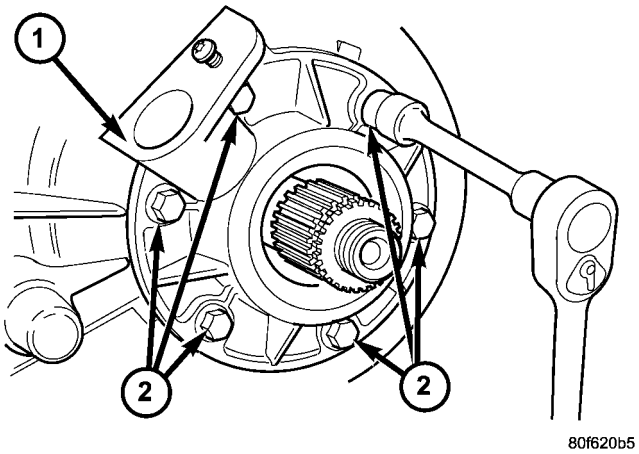

Fig. 88 Rear Extension Bolt Installation

1 - EXTENSION HOUSING
2 - BOLTS

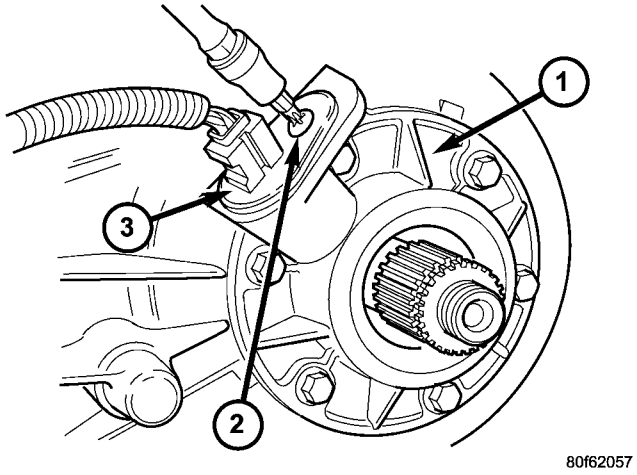

Fig. 90 Speedometer Sensor Bolt Installation

1 - EXTENSION HOUSING
2 - BOLT
3 - SPEEDOMETER SENSOR

(7) Install new seal in rear extension housing with Installer 9041 and Handle C-4171.

(8) Install the speedometer sensor (Fig. 89) into the extension housing.

(9) Install the speedometer sensor bolt (Fig. 90). Tighten the bolt to 11-16 N·m (8-12 ft.lbs.).

(10) Install the rear companion flange onto the output shaft.

(11) Install bolts into two threaded holes in the rear propeller shaft companion flange 180° apart (Fig. 91).

(12) Place the Holder 6719 (Fig. 91) over the two bolts and use the Holder to install a new rear companion flange nut. Never re-use the companion flange nut once it has been installed. Tighten the companion flange nut to 122-176 N·m (90-130 ft.lbs.).