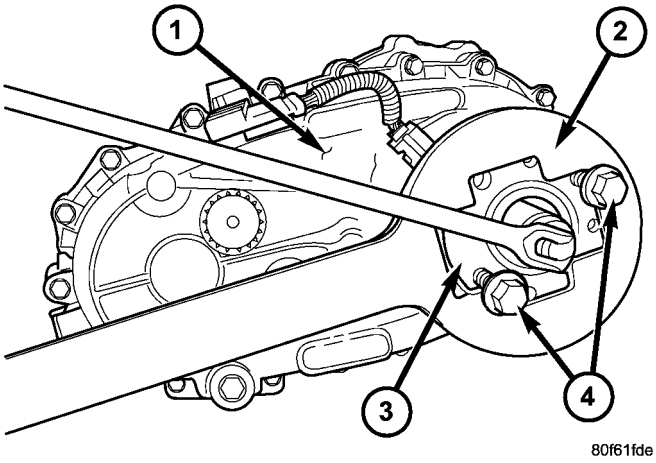

Fig. 91 Rear Companion Flange Nut Removal

1 - TRANSFER CASE
2 - HOLDER 6719
3 - COMPANION FLANGE
4 - BOLTS

INSTALLATION

(1) Align and seat transfer case on transmission. Be sure transfer case input gear splines are aligned with transmission output shaft. Align splines by rotating transfer case rear output shaft yoke if necessary. Do not install any transfer case attaching nuts until the transfer case is completely seated against the transmission.

(2) Install and tighten transfer case attaching nuts. Tighten nuts to 30-41 N·m (20-30 ft.lbs.).

(3) Install rear crossmember.

(4) Remove jack stand from under transmission.

(5) Align and connect propeller shafts. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - INSTALLATION)

(6) Connect vacuum harness and vent hose.

(7) Connect shift rod to transfer case lever or floor shift arm. Use channel lock style pliers to press rod back into lever grommet.

(8) Adjust shift linkage, if necessary.

(9) Fill transfer case with recommended transmission fluid and install fill plug.

(10) Install skid plate, if equipped. (Refer to 13 - FRAMES & BUMPERS/FRAME/TRANSFER CASE SKID PLATE - INSTALLATION)

(11) Lower vehicle

SPECIFICATIONS

TRANSFER CASE - NV241

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Plug, Detent	16-25	12-18	-
Plug, Drain/Fill	20-34	15-25	-
Bolt, Rear Extension	16-24	12-18	-
Bolt, Front Input Retainer	21	16	-
Bolt, Case Half	20-27	15-20	-
Nut, Front Yoke	122-176	90-130	-
Nut, Rear Companion Flange	258-312	190-230	-
Bolt, Shift Lever	20-34	15-25	-
Nuts, Mounting	30-41	20-30	-
Bolts, U-Joint	19	17	-
Support, Sector	27-42	20-30	-
Sensor, Transfer Case Position	20-34	16-25	-
Bolt, Speed Sensor	11-16	8-12	-