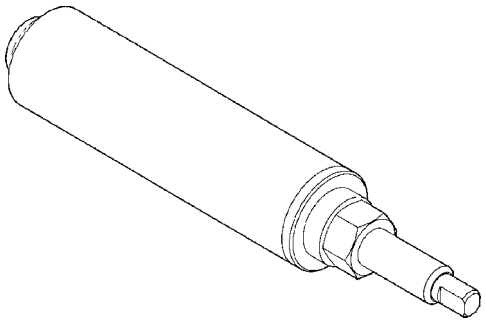

Remover - 8240

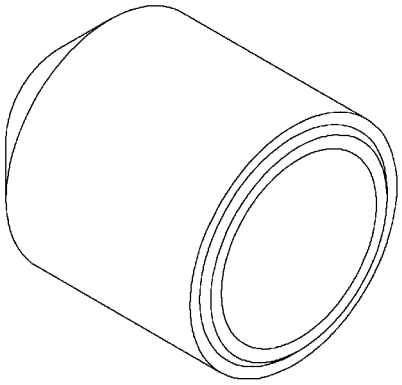

Installer, Seal - 8841

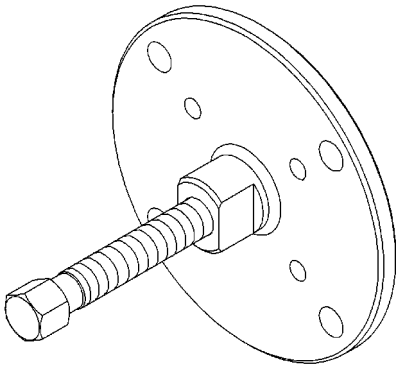

Flange Puller - 8992

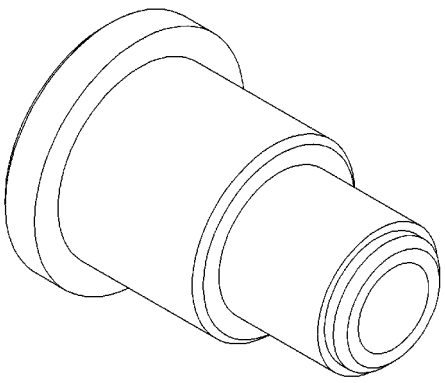

Installer, Cup Seal - 9045

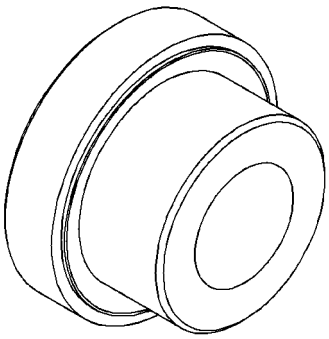

Installer, Bearing - 9047

REAR EXTENSION SEAL

REMOVAL

(1) Raise and support vehicle.

(2) Remove rear propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - REMOVAL)

(3) Remove the rear companion flange from the output shaft.

(4) Using a suitable pry tool or slide-hammer mounted screw, remove the rear extension seal.

INSTALLATION

(1) Clean fluid residue from sealing surface and inspect for defects.

(2) Using Installer 9041 and Handle C-4171, install seal in rear extension (Fig. 92).

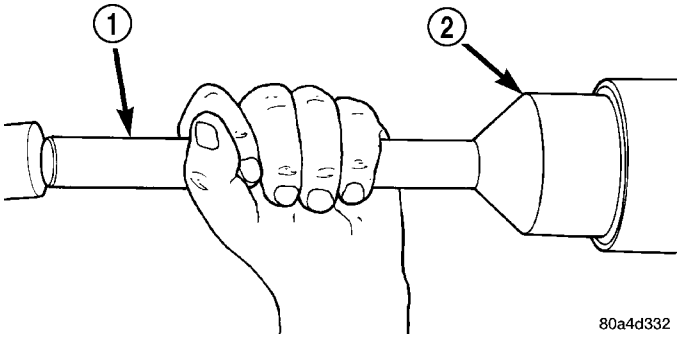

Fig. 92 Install Rear Extension Seal

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL 9041

(3) Install the companion flange onto the output shaft.

(4) Install a new companion flange nut and tighten to 176-271 N·m (130-200 ft.lbs.).

(5) Install propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - INSTALLATION)

(6) Verify proper transfer case fluid level.

(7) Lower vehicle.