FLUID

STANDARD PROCEDURE - FLUID DRAIN AND FILL

The fill and drain plugs are both in the rear case (Fig. 93). Correct fill level is to the bottom edge of the fill plug hole. Be sure the vehicle is level to ensure an accurate fluid level check.

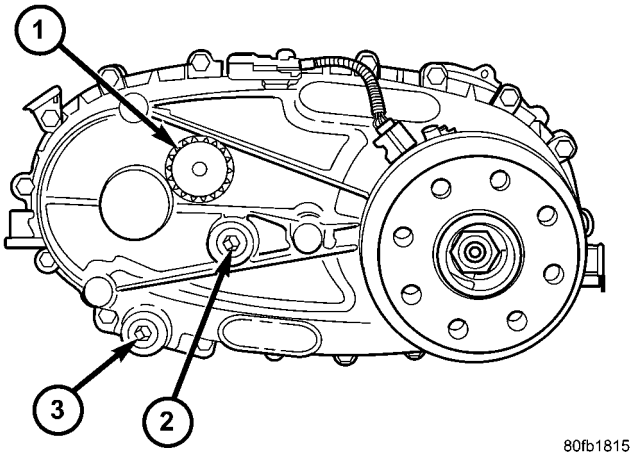

Fig. 93 Transfer Case Identification Tag and Fill/Drain Plugs

1 - IDENTIFICATION TAG
2 - FILL PLUG
3 - DRAIN PLUG

FRONT OUTPUT SHAFT SEAL

REMOVAL

(1) Shift transfer case into NEUTRAL.
(2) Raise vehicle.
(3) Remove front propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/ PROPELLER SHAFT - REMOVAL)
(4) Using Spanner Wrench 6958, remove yoke nut (Fig. 94). Discard nut after removal. It is not reusable.

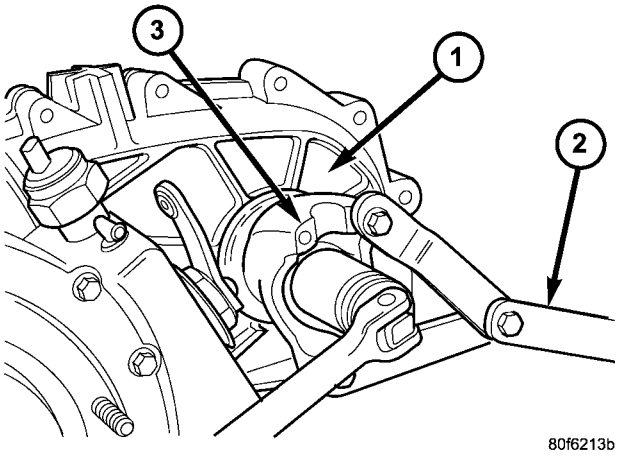

Fig. 94 Front Yoke Nut Removal

1 - TRANSFER CASE
2 - HOLDER 6958
3 - FRONT YOKE

(5) Remove yoke from output shaft (Fig. 95). Use puller C-452 if flange can not be removed by hand.
(6) Remove yoke rubber seal from front output shaft (Fig. 96).

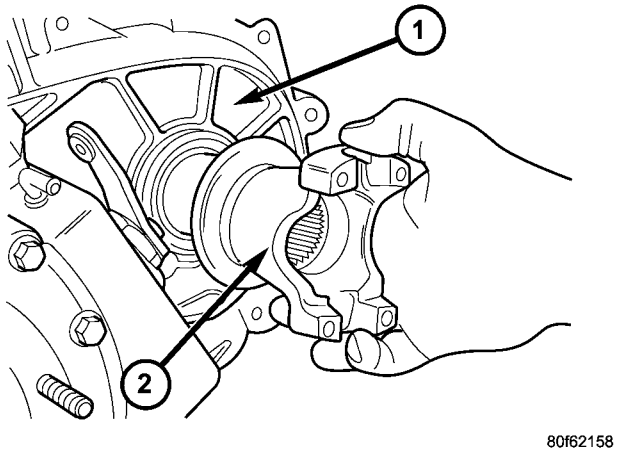

Fig. 95 Front Yoke Removal

1 - TRANSFER CASE
2 - FRONT YOKE

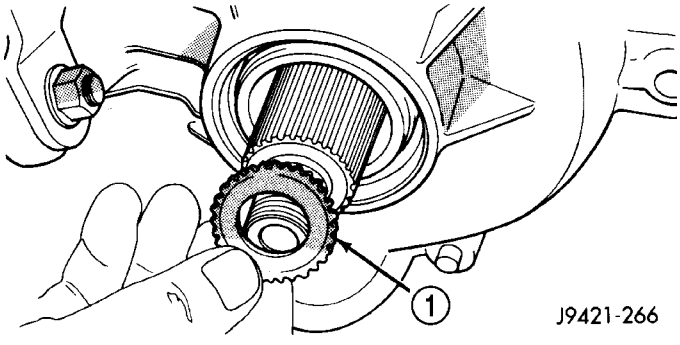

Fig. 96 Yoke Seal Removal

1 - FLANGE SEAL