(7) Remove front output shaft seal with suitable pry tool, or a slide hammer mounted screw.

INSTALLATION

(1) Install new front output seal in front case with Installer Tool 9041 and Handle C-4171 (Fig. 97).

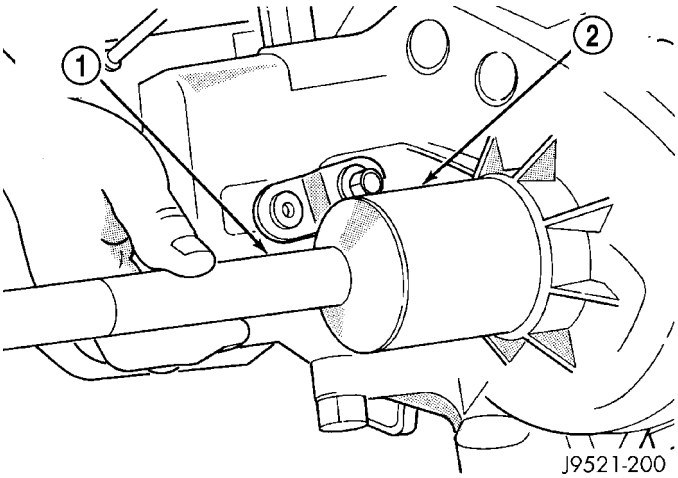

Fig. 97 Front Output Seal Installation - Typical

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL 9041

(2) Install yoke seal on front output shaft (Fig. 98).

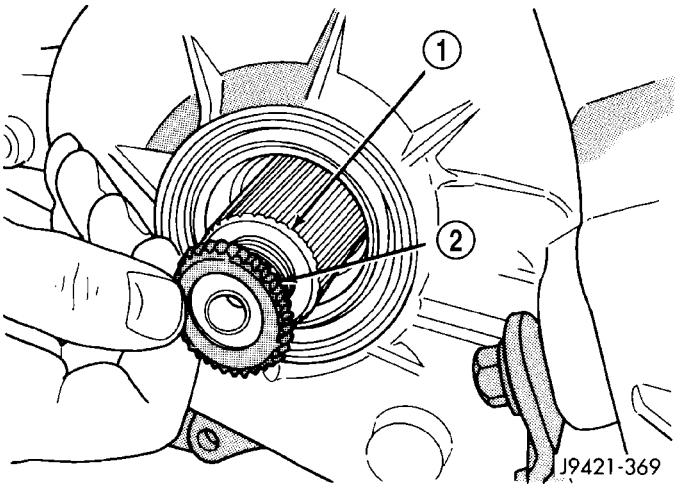

Fig. 98 Installing Flange Seal On Front Shaft

1 - FRONT OUTPUT SHAFT
2 - FLANGE SEAL

(3) Install yoke on front output shaft (Fig. 99). Install a new yoke nut onto the front output shaft.

(4) Using Spanner Wrench 6958 (Fig. 100), tighten the yoke nut to 176-271 N·m (130-200 ft. lbs.) torque.

(5) Install propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - INSTALLATION)

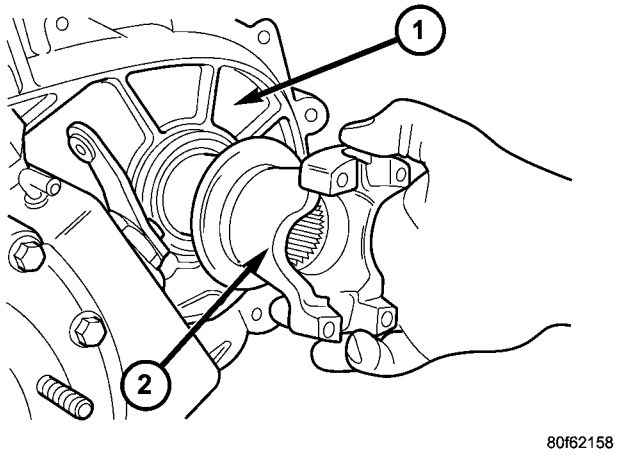

Fig. 99 Front Yoke Installation

1 - TRANSFER CASE
2 - FRONT YOKE

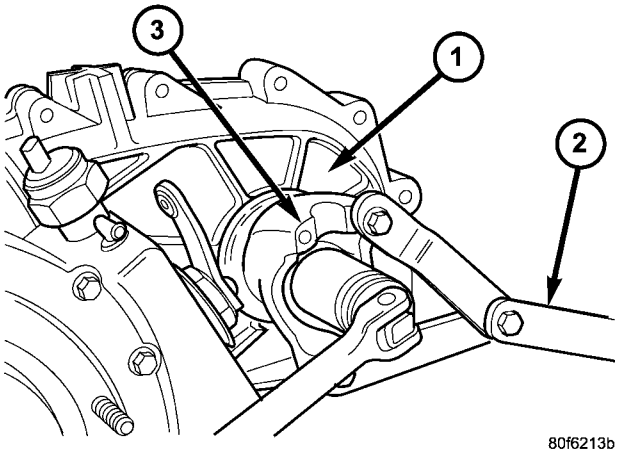

Fig. 100 Front Yoke Nut Installation

1 - TRANSFER CASE
2 - HOLDER 6958
3 - FRONT YOKE

POSITION SENSOR

DESCRIPTION

The transfer case position sensor is an electronic device whose output can be interpreted to indicate the transfer case's current operating mode. The sensor consists of a five position, resistive multiplexed circuit which returns a specific resistance value to the Powertrain Control Module (PCM) for each transfer case operating mode. The sensor is located on the top of the transfer case, just left of the transfer case centerline and rides against the sector plate roostercomb. The PCM supplies 5VDC (+/- 0.5V) to the sensor and monitors the return voltage to determine the sector plate, and therefore the transfer case, position.