OPERATION

OPERATING MODE VERSUS RESISTANCE

SENSOR POSITION	OPERATING MODE	SENSOR RESISTANCE (ohms)
1	2H	1124-1243
2	4H	650-719
3	NEUTRAL	389-431
4	4L	199-221
5	NOT USED	57-64

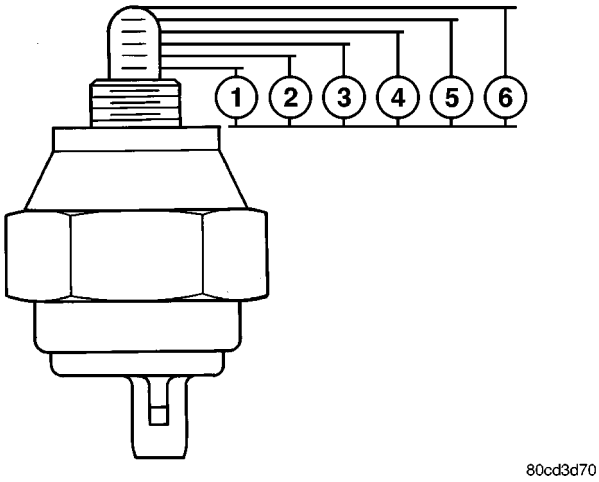

Fig. 101 Position Sensor Linear Movement

1 - POSITION 1 - 10mm ±0.5mm
2 - POSITION 2 - 12mm ±0.5mm
3 - POSITION 3 - 14mm ±0.5mm
4 - POSITION 4 - 16mm ±0.5mm
5 - POSITION 5 - 18mm ±0.5mm
6 - POSITION 6 - 20mm±0.5mm - FULL EXTENSION

During normal vehicle operation, the Powertrain Control Module (PCM) monitors the transfer case position sensor return voltage to determine the operating mode of the transfer case. Refer to the Operating Mode Versus Resistance table for the correct resistance (1-6) (Fig. 101) for each position.

REMOVAL

(1) Raise and support the vehicle.
(2) Disengage the transfer case position sensor connector from the position sensor.
(3) Remove the position sensor from the transfer case.

INSTALLATION

(1) Inspect the o-ring seal on the transfer case position sensor. Replace the o-ring if necessary.
(2) Install the transfer case position sensor into the transfer case. Torque the sensor to 20-34 N·m (15-25 ft.lbs.).
(3) Engage the transfer case position sensor connector to the position sensor.
(4) Lower vehicle.
(5) Verify proper sensor operation.

SHIFT LEVER

REMOVAL

(1) Shift transfer case into 4L.
(2) Raise vehicle.
(3) Loosen adjusting trunnion locknut and slide shift rod out of trunnion (Fig. 102). If rod lacks enough travel to come out of trunnion, push trunnion out of torque shaft.
(4) Lower vehicle.
(5) Remove console. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - REMOVAL)
(6) Remove screws attaching lever assembly to floorpan and remove assembly and shift rod (if left attached).