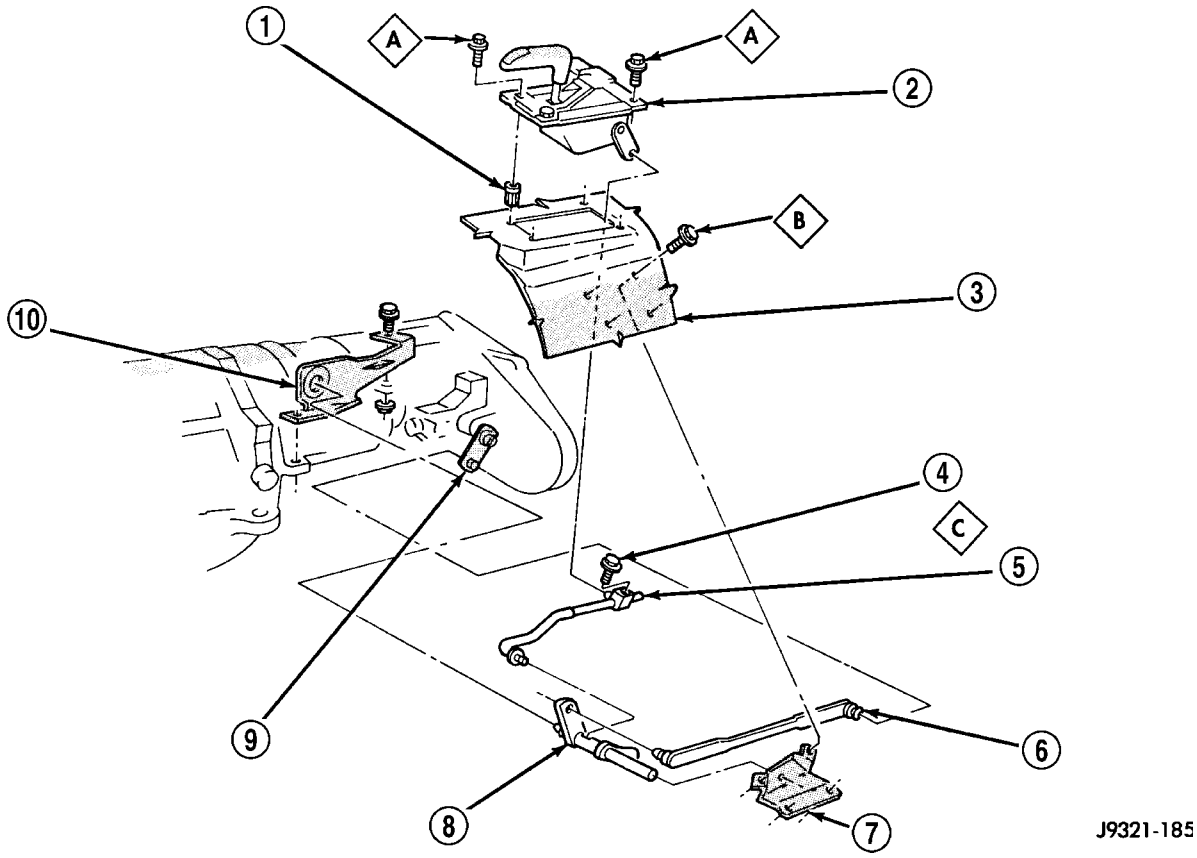

Fig. 102 Shift Linkage

1 - Rivnut (4)
2 - Shift Lever Assembly
3 - Floorpan
4 - Trunnion Lock Bolt
5 - Selector Rod and Trunnion
6 - Shift Lever Rod
7 - Torque Shaft Frame Bracket
8 - Torque Shaft
9 - Transfer Case Shift Lever
10 - Torque Shaft Transfer Case Bracket
A - 3-4 N·m (27-35 in. lbs.)
B - 11-14 N·m (97-123 in. lbs.)
C - 8-14 N·m (72-120 in. lbs.)

INSTALLATION

(1) If shift rod was not removed from lever assembly, work rod down through floorpan opening. Then position lever assembly on floorpan and install assembly attaching screws.

(2) Install console. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - INSTALLATION)

(3) Raise vehicle.

(4) Connect trunnion to torque shaft arm. Or, slide shift rod into trunnion on range lever. Be sure shift rod slides freely in trunnion.

(5) Verify that range lever is in 4L position. Then tighten trunnion lock bolt.

(6) Lower vehicle and check transfer case shift operation.

ADJUSTMENTS - SHIFT LINKAGE

(1) Shift transfer case into 4L position.

(2) Raise vehicle.

(3) Loosen lock bolt on adjusting trunnion (Fig. 103).

(4) Be sure linkage rod slides freely in trunnion. Clean rod and apply spray lube if necessary.

(5) Verify that transfer case range lever is fully engaged in 4L position.

(6) Tighten adjusting trunnion lock bolt.

(7) Lower vehicle.