STANDARD PROCEDURE - REPAIRING LEAKS

For proper repairing, a radial tire must be removed from the wheel. Repairs should only be made if the defect, or puncture, is in the tread area (Fig. 17). The tire should be replaced if the puncture is located in the sidewall.

Deflate tire completely before removing the tire from the wheel. Use lubrication such as a mild soap solution when dismounting or mounting tire. Use tools free of burrs or sharp edges which could damage the tire or wheel rim.

Before mounting tire on wheel, make sure all rust is removed from the rim bead and repaint if necessary.

Install wheel on vehicle, and tighten to proper torque specification. (Refer to 22 - TIRES/WHEELS/ WHEELS - STANDARD PROCEDURE).

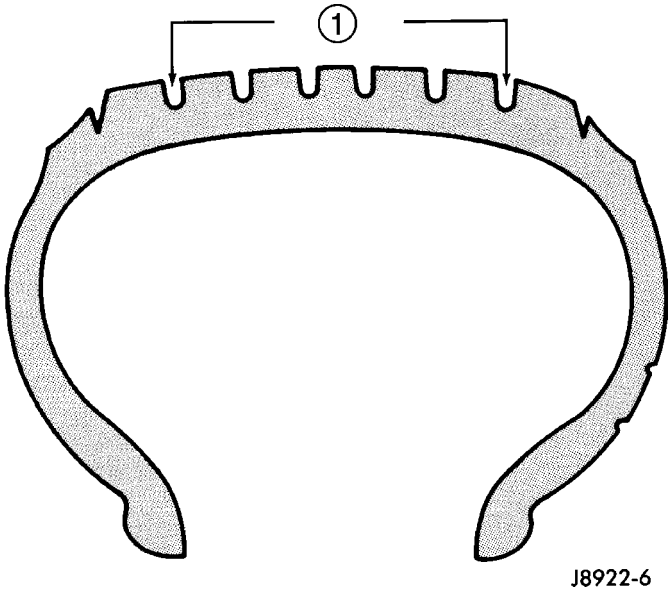

Fig. 17 Tire Repair Area

1 - REPAIRABLE AREA

CLEANING - TIRES

Remove the protective coating on the tires before delivery of a vehicle. This coating may cause deterioration of the tires.

To remove the protective coating, apply warm water and let it soak for a few minutes. Afterwards, scrub the coating away with a soft bristle brush. Steam cleaning may also be used to remove the coating.

NOTE: DO NOT use gasoline, mineral oil, oil-based solvent or a wire brush for cleaning.

SPECIFICATIONS

TIRE SIZE

DESCRIPTION	SPECIFICATION
TIRE	P215/75R15
TIRE	P225/75R15
TIRE	LT245/75R16
TIRE	30x9.50R15

SPARE TIRE

DESCRIPTION

DESCRIPTION - SPARE / TEMPORARY

The temporary spare tire is designed for emergency use only. The original tire should be repaired or replaced at the first opportunity, then reinstalled. Do not exceed speeds of 50 M.P.H. when using the temporary spare tire. Refer to Owner's Manual for complete details.

DESCRIPTION - FULL SIZE, SPARE WHEEL WITH MATCHING TIRE

The spare is a full usage wheel with a matching tire, It can be used within the (posted legal) speed limits or distance limitations as of the rest of the vehicles four tires. Refer to Owner's Manual for complete details.

SPARE TIRE CARRIER

REMOVAL

(1) Remove the spare tire from the wheel bracket (Fig. 18).

(2) Remove the bolts that attach the tire bracket to the tailgate (Fig. 19).

(3) Disconnect CHMSL.

(4) Remove the bracket and the gaskets from the tailgate.