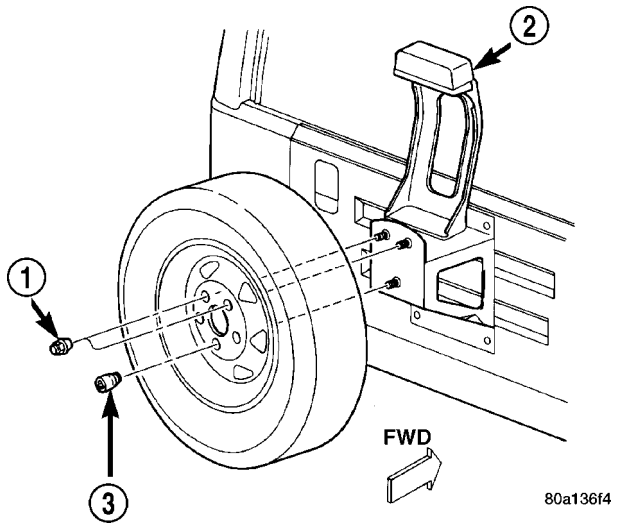


*Fig. 18 Spare Tire*

1 - WHEEL NUT
2 - CHMSL
3 - LOCK NUT

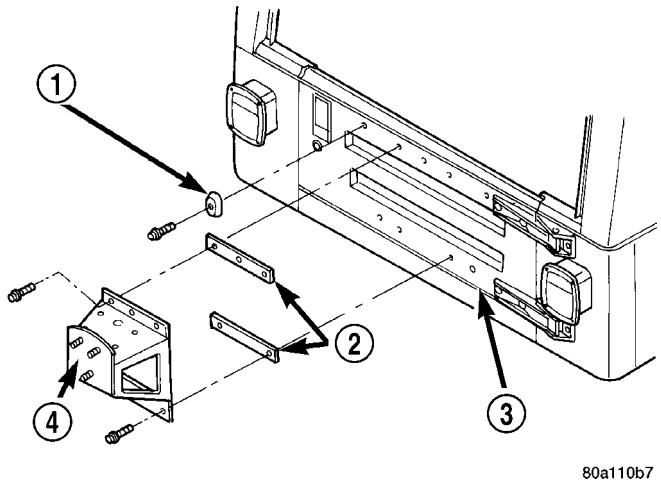


*Fig. 19 Spare Tire Bracket*

1 - BUMPER
2 - GASKET
3 - TAILGATE
4 - SPARE TIRE BRACKET

## INSTALLATION

(1) Position the gaskets and the tire bracket on the tailgate and install the bolts. Tighten the bolts to 24 N·m (17 ft. lbs.) torque.

(2) Connect CHMSL connector.

(3) Install the spare tire on the tire bracket.

# WHEELS

## DESCRIPTION

The rim size is on the vehicle safety certification label located on the drivers door shut face. The size of the rim is determined by the drivetrain package. Original equipment wheels/rims are designed for operation up to the specified maximum vehicle capacity.

All models use stamped steel, cast aluminum or forged aluminum wheels. Every wheel has raised sections between the rim flanges and rim drop well called safety humps (Fig. 20).

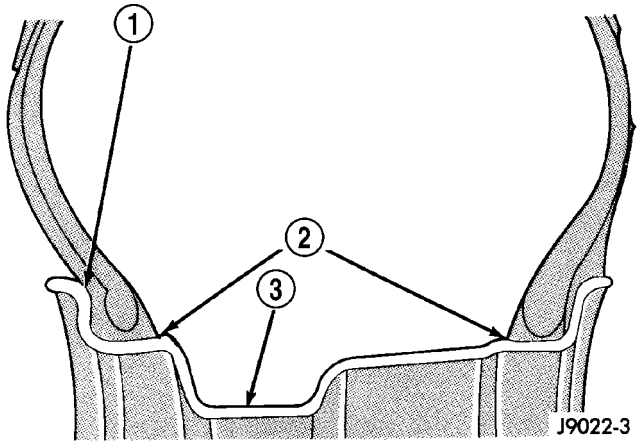


*Fig. 20 Safety Rim*

1 - FLANGE
2 - RIDGE
3 - WELL

Initial inflation of the tire forces the bead over these raised sections. In case of rapid loss of air pressure, the raised sections help hold the tire on the wheel.

The wheel studs and nuts are designed for specific applications. All aluminum and some steel wheels have wheel stud nuts with an enlarged nose. This enlarged nose is necessary to ensure proper retention of the wheels. Do not use replacement studs or nuts with a different design or lesser quality.

## DIAGNOSIS AND TESTING - WHEEL INSPECTION

Inspect wheels for:

- Excessive run out
- Dents or cracks
- Damaged wheel lug nut holes
- Air Leaks from any area or surface of the rim

**NOTE: Do not attempt to repair a wheel by hammering, heating or welding.**

If a wheel is damaged an original equipment replacement wheel should be used. When obtaining replacement wheels, they should be equivalent in load carrying capacity. The diameter, width, offset, pilot hole and bolt circle of the wheel should be the same as the original wheel.