# TAILGATE

## TABLE OF CONTENTS


page

**TAILGATE OUTSIDE HANDLE**
REMOVAL . . . . . 13
INSTALLATION . . . . . 13
**TAILGATE HINGE**
REMOVAL . . . . . 13
INSTALLATION . . . . . 13
**TAILGATE LATCH**
REMOVAL . . . . . 14
INSTALLATION . . . . . 14
**TAILGATE LATCH STRIKER**
REMOVAL . . . . . 14
INSTALLATION . . . . . 14
**LIFTGATE GLASS HINGE**
REMOVAL . . . . . 14
INSTALLATION . . . . . 14
**LIFTGATE GLASS**
REMOVAL . . . . . 15
INSTALLATION . . . . . 15
**LIFTGATE GLASS WEATHERSTRIP**
DESCRIPTION . . . . . 15
**TAILGATE LOCK CYLINDER**
REMOVAL . . . . . 15
INSTALLATION . . . . . 15
**LIFTGATE GLASS SUPPORT CYLINDER**
REMOVAL . . . . . 16
INSTALLATION . . . . . 16
**TAILGATE**
REMOVAL . . . . . 16
INSTALLATION . . . . . 16
ADJUSTMENTS
ADJUSTMENT . . . . . 16


## TAILGATE OUTSIDE HANDLE

### REMOVAL

(1) Remove the latch from the tailgate. (Refer to 23 - BODY/TAILGATE/LATCH - REMOVAL)

(2) Remove the screws attaching the outside handle to the tailgate (Fig. 1).

(3) Separate the outside handle and seal from the tailgate.

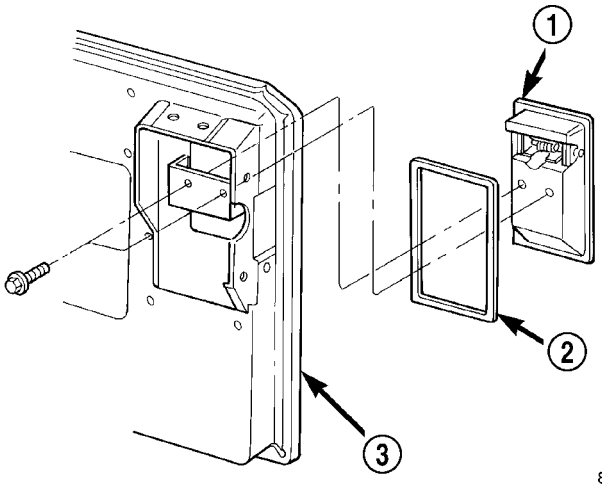


***Fig. 1 TAILGATE OUTSIDE HANDLE***

1 - OUTSIDE HANDLE
2 - SEAL
3 - TAILGATE

### INSTALLATION

(1) Position the seal and outside release handle on the tailgate. and install screws.

(2) Install the screws attaching the outside handle to the tailgate.

(3) Install the latch. (Refer to 23 - BODY/TAILGATE/LATCH - INSTALLATION)

## TAILGATE HINGE

### REMOVAL

**NOTE: Hinges may be serviced individually. If both are to be serviced, remove/install hinges one at a time.**

(1) Using a grease pencil or equivalent, mark the position of the hinge on the body.

(2) Remove the screws attaching the hinge to the body and tailgate (Fig. 2).

(3) Separate the hinge from the tailgate.

### INSTALLATION

**NOTE: Hinges may be serviced individually. If both are to be serviced, remove/install hinges one at a time.**

(1) Prepare and paint the replacement hinge to match the body paint color.

(2) Lubricate the hinge with spray lubricant.