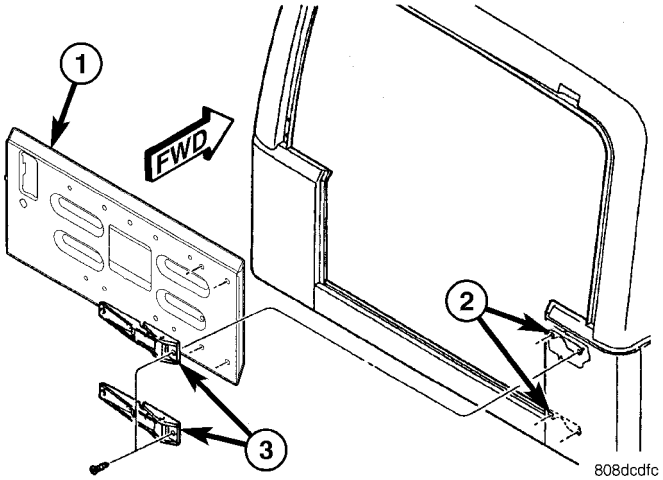


*Fig. 2 TAILGATE HINGE*

1 - TAILGATE
2 - NUT PLATE
3 - HINGE

(3) Align and position the hinge on the body and tailgate.

(4) Install the screws and tighten the screws to 23 N·m (200 in. lbs.).

## TAILGATE LATCH

### REMOVAL

(1) Open the tailgate and remove the latch trim cover (Fig. 3).

(2) Disconnect the outside handle to latch rod.

(3) Disconnect the lock cylinder to latch rod.

(4) Remove the screw attaching latch to tailgate.

(5) Separate the latch from the tailgate.

### INSTALLATION

(1) Position the latch in the tailgate.

(2) Install the screw attaching latch to tailgate. Do not tighten screw.

(3) Connect the lock cylinder to latch rod.

(4) Connect the outside handle to latch rod.

(5) Install the latch trim cover.

## TAILGATE LATCH STRIKER

### REMOVAL

(1) Remove the striker from the bracket.

(2) Remove the shim washers from the bracket.

(3) Remove the screws attaching the striker bracket to the body.

### INSTALLATION

(1) Position the striker bracket on the body and install the screws.

(2) Position the striker and shim washers on the striker bracket.

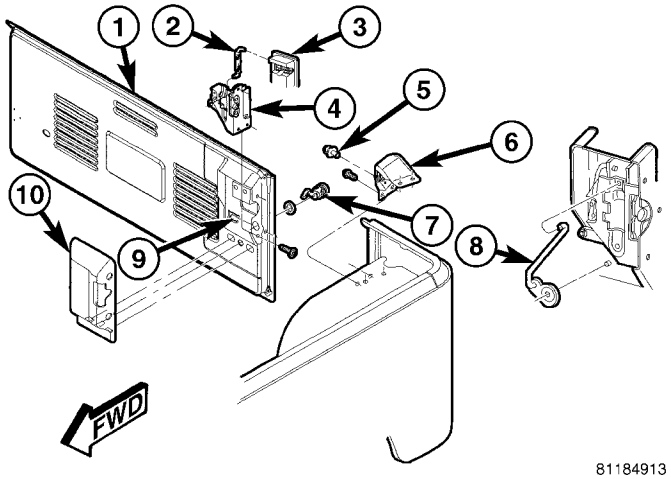


*Fig. 3 TAILGATE LATCH*

1 - TAILGATE
2 - OUTSIDE HANDLE ROD
3 - OUTSIDE HANDLE
4 - LATCH
5 - STRIKER
6 - STRIKER MOUNTING BRACKET
7 - LOCK CYLINDER
8 - LOCK CYLINDER ROD
9 - LOCK CYLINDER RETAINER CLIP
10 - LATCH COVER

(3) Install the striker in the bracket and tighten the striker to 71 N·m (52 ft. lbs.).

## LIFTGATE GLASS HINGE

### REMOVAL

(1) Open tailgate.

(2) Open and support liftgate glass.

(3) Remove wiper motor cover (right hinge only). (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - REMOVAL)

(4) Remove the wiper blade. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER BLADE - REMOVAL)

(5) Remove the nut attaching the liftgate hinge to the liftgate glass.

(6) Mark the position of the hinge in the top and remove the bolts attaching the hinge to the top (Fig. 4).

### INSTALLATION

(1) Align and position the hinge on the top and install the bolts.

(2) Install the nut attaching the liftgate hinge to the liftgate glass and tighten to 6 N·m (53 in. lbs.).

(3) Install wiper motor cover. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - INSTALLATION)