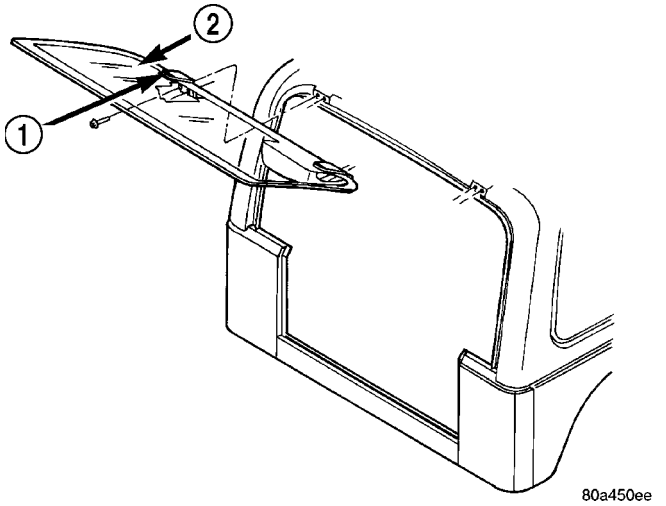

Fig. 4 LIFTGATE HINGE

1 - LIFTGATE HINGE
2 - LIFTGATE GLASS

(4) Install the wiper blade. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER BLADE - INSTALLATION)

LIFTGATE GLASS

REMOVAL

(1) Disconnect the rear defroster harness connectors.

(2) Disconnect the wiper motor harness connectors.

WARNING: DO NOT REMOVE THE LIFTGATE SUPPORT RODS WITH THE LIFTGATE CLOSED. THE SUPPORT ROD PISTONS ARE OPERATED BY HIGH PRESSURE GAS AND COULD CAUSE PERSONAL INJURY AND/OR VEHICLE DAMAGE IF THEY ARE REMOVED WITH THE PISTONS COMPRESSED (LIFTGATE CLOSED). ONCE REMOVED, DO NOT ATTEMPT TO DISASSEMBLE OR REPAIR THE SUPPORT RODS.

(3) Open the tailgate and liftgate.

(4) Remove support rod cylinders. (Refer to 23 - BODY/TAILGATE/SUPPORT CYLINDER - REMOVAL)

(5) Remove the bolts attaching the liftgate hinge to the hardtop (Fig. 5).

(6) Separate the liftgate glass from the hard top.

INSTALLATION

Transfer all related components.

(1) If removed, install support rod ball studs and tighten the nut to 12 N·m (112 in. lbs.).

(2) Position the liftgate glass at the hard top.

(3) Install the bolts attaching the liftgate hinge to the hardtop and tighten to 10 N·m (95 in. lbs.).

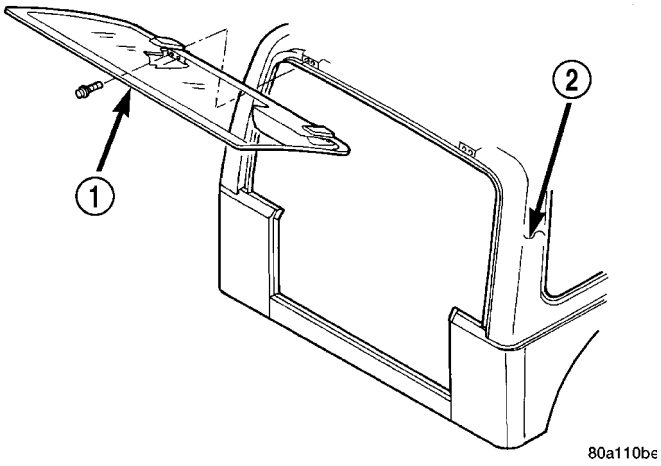

Fig. 5 LIFTGATE GLASS

1 - LIFTGATE REAR WINDOW
2 - HARD TOP

(4) Install the support rod cylinders. (Refer to 23 - BODY/TAILGATE/SUPPORT CYLINDER - INSTALLATION)

LIFTGATE GLASS WEATHERSTRIP

DESCRIPTION

The liftgate glass weatherstrip is attached to the liftgate glass and is not serviceable. If the liftgate glass weatherstrip needs to be replaced, replace the liftgate glass. (Refer to 23 - BODY/LIFTGATE GLASS - REMOVAL)

TAILGATE LOCK CYLINDER

REMOVAL

(1) Open the tailgate.

(2) Remove the latch cover.

(3) Remove the lock cylinder retainer clip.

(4) Remove the lock cylinder from the tailgate opening.

INSTALLATION

(1) Position the lock cylinder in the tailgate opening.

(2) Connect the lock cylinder to latch rod.

(3) Install the lock cylinder retainer clip.

(4) Install the latch cover.