LIFTGATE GLASS SUPPORT CYLINDER

REMOVAL

WARNING: DO NOT REMOVE THE LIFTGATE SUPPORT RODS WITH THE LIFTGATE CLOSED. THE SUPPORT ROD PISTONS ARE OPERATED BY HIGH PRESSURE GAS AND COULD CAUSE PERSONAL INJURY AND/OR VEHICLE DAMAGE IF THEY ARE REMOVED WITH THE PISTONS COMPRESSED (LIFTGATE CLOSED). ONCE REMOVED, DO NOT ATTEMPT TO DISASSEMBLE OR REPAIR THE SUPPORT RODS.

(1) Open and support the liftgate glass.
(2) Release the support rod cylinder retaining clips at both ends of each support rod cylinder. (Fig. 6)
(3) Pull the support rods off the ball studs (Fig. 7).

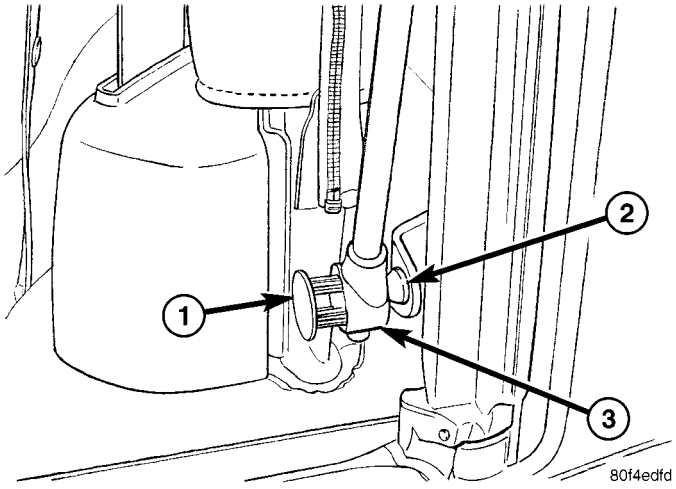

Fig. 6 SUPPORT ROD CYLINDER CONNECTION

1 - CLIP
2 - BALL STUD
3 - SUPPORT ROD END

INSTALLATION

(1) Position the support rod cylinders on the ball studs.
(2) Install the support rod cylinder retainer clips.

TAILGATE

REMOVAL

(1) Remove the spare tire.
(2) Open the tailgate and remove the center high mounted stop lamp (CHMSL) contact cover (Fig. 8).
(3) Disengage the CHMSL electrical connectors.
(4) Remove the screws that attach the tailgate hinge to the tailgate.
(5) Separate the tailgate from the vehicle.

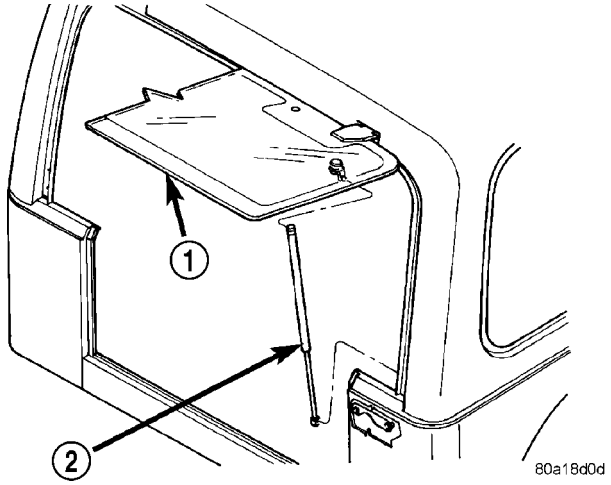

Fig. 7 SUPPORT ROD CYLINDER REMOVAL

1 - REAR WINDOW LIFT GLASS
2 - SUPPORT CYLINDER

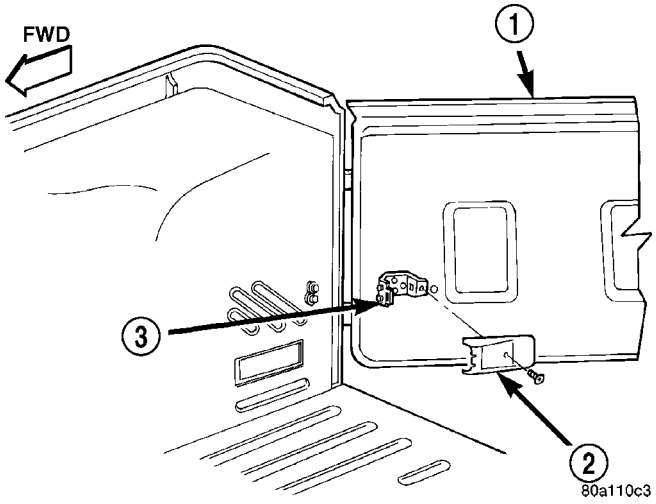

Fig. 8 CHMSL CONTACT COVER

1 - TAILGATE
2 - COVER
3 - CHMSL CONTACT COVER BRACKET

INSTALLATION

NOTE: If necessary, transfer tailgate related components.

(1) Install the screws that attach the tailgate hinge to the tailgate.
(2) Engage the CHMSL electrical connectors.
(3) Install the CHMSL contact cover.
(4) Close the tailgate and install the spare tire.

ADJUSTMENTS

ADJUSTMENT

(1) Loosen the tailgate hinge-to-body screws.
(2) Align the tailgate in the body opening and tighten the hinge screws. (Refer to 23 - BODY/BODY STRUCTURE/GAP AND FLUSH - SPECIFICATIONS)