FULL DOOR

TABLE OF CONTENTS

page

DOOR
REMOVAL 17
INSTALLATION 17
ADJUSTMENTS
ADJUSTMENT 17
DOOR GLASS
REMOVAL 17
INSTALLATION 18
WINDOW REGULATOR
REMOVAL 18
INSTALLATION 19
EXTERIOR HANDLE
REMOVAL 19
INSTALLATION 19
GLASS RUN CHANNEL
REMOVAL 20
INSTALLATION 20
HINGE
REMOVAL 20
INSTALLATION 20
INSIDE HANDLE ACTUATOR
REMOVAL 21
INSTALLATION 21
LATCH
REMOVAL 21
INSTALLATION 21
LATCH STRIKER
REMOVAL 21
INSTALLATION 22
LOCK CYLINDER
REMOVAL 22
INSTALLATION 22
TRIM PANEL
REMOVAL 22
INSTALLATION 22

DOOR

REMOVAL

(1) Open the door.

(2) Disconnect the door restraint strap from the pin (Fig. 1).

(3) Remove the nuts at the door hinge pivots and lift the door from the body.

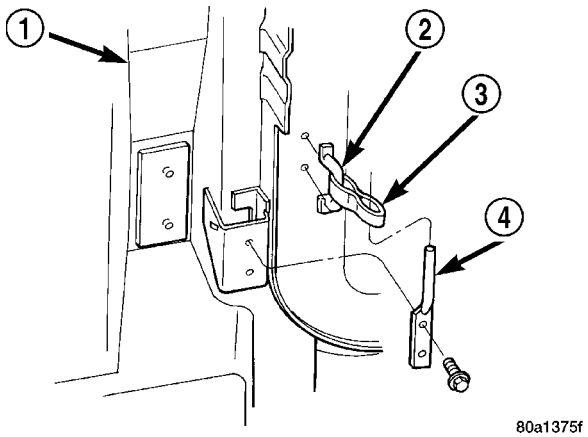

Fig. 1 RESTRAINT STRAP

1 - BODY
2 - FOOTMAN LOOP
3 - STRAP
4 - RESTRAINT PIN

INSTALLATION

(1) Position the door in the hinge and install the nuts.

(2) Connect the door restraint strap at the pin.

ADJUSTMENTS

ADJUSTMENT

The doors are adjusted at the hinge attaching locations on either the body or the door. Enlarged holes are located in the body (lower hinge only) for fore, aft and tilt adjustments. Enlarged holes are also located in the door (upper and lower hinges) for up, down, fore, aft and tilt adjustments.

Prior to door adjustment or alignment, the door latch must be removed to allow the door to close freely and be properly aligned.

The door latch striker should be adjusted in or out to allow the door latch to be fully engaged. The door should be flush with the adjacent body panels.

DOOR GLASS

REMOVAL

(1) Remove the door trim panel and the waterdam. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - REMOVAL)