the retainer must be positioned on the 2nd or 3rd step from the bottom on the handle keeper.

(6) Raise the window.

(7) Connect to the latch, the inside lock knob to latch rod and, the outside release handle to latch rod.

(8) Reposition the waterdam

(9) Install the grab handle support bracket.

(10) Install the door trim panel. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - INSTALLATION)

GLASS RUN CHANNEL

REMOVAL

(1) Lower the window.

(2) Using a trim stick C-4755 or equivalent, carefully pry the glass run channel weatherstrip from the window opening frame.

(3) Remove the door glass. (Refer to 23 - BODY/FULL DOOR/DOOR GLASS - REMOVAL)

(4) Grasp the glass run channel weatherstrip in the door (Fig. 8) and pull from the channel.

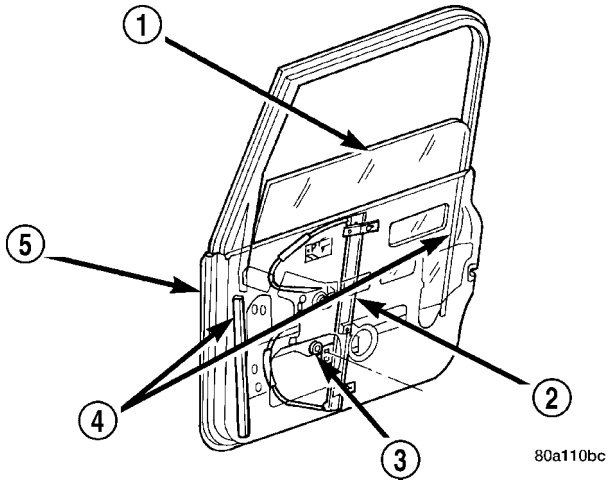

Fig. 8 FULL DOOR GLASS RUN CHANNEL WEATHERSTRIP

1 - WINDOW GLASS
2 - REGULATOR
3 - GROMMET
4 - GLASS RUN CHANNEL WEATHERSTRIP
5 - DOOR

INSTALLATION

NOTE: Applying a small amount of lubricant to the weatherstrip may ease the installation.

(1) Position the weatherstrip in the lower door channels and press into place.

(2) Install the door glass. (Refer to 23 - BODY/FULL DOOR/DOOR GLASS - INSTALLATION)

(3) Position the weatherstrip in the window opening frame and press into place.

NOTE: Ensure that the glass is seated properly. Improperly seated door glass will result in high glass roll-up/roll-down effort.

HINGE

REMOVAL

(1) Remove the door. (Refer to 23 - BODY/FULL DOOR/DOOR - REMOVAL)

(2) Using a grease pencil or equivalent, mark the outline of the existing hinge on the body and the door for installation alignment reference.

(3) Remove the nut from the upper hinge pin (Fig. 9).

NOTE: When removing the door or hinge DO NOT discard the plastic shims or the hinge pin.

(4) Remove the hinge-to-body screws and the hinge-to-door screws. Remove the hinge from the door and body. Support the door as necessary. The upper hinge is integrated with the windshield hinge. When removing it, support the windshield frame with an appropriate device prior to removal.

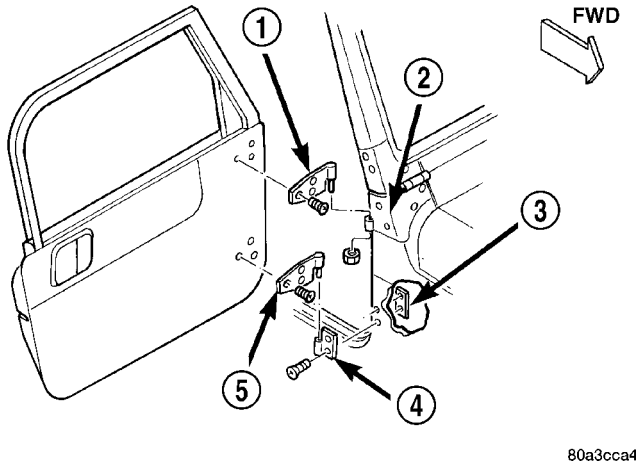

Fig. 9 FULL DOOR HINGE

1 - HINGE HALF
2 - HINGE HALF
3 - TAPPING PLATE
4 - HINGE HALF
5 - HINGE HALF

INSTALLATION

(1) Clean the replacement hinge with an appropriate solvent and dry it with compressed air.

(2) Paint the hinge to match the vehicle body.

(3) Lubricate the hinge with spray lubricant.

(4) Position the hinge on the door, align carefully with the wax pencil installation alignment reference marks, and install the screws.

(5) Position the hinge on the vehicle body. Align the wax pencil marks installation alignment reference marks. Install the screws.