(6) Install the door. (Refer to 23 - BODY/FULL DOOR/DOOR - INSTALLATION)

(7) Inspect the windshield alignment after hinge installation.

(8) Inspect the door alignment and adjust, if necessary. (Refer to 23 - BODY/FULL DOOR/DOOR - ADJUSTMENTS)

INSIDE HANDLE ACTUATOR

REMOVAL

(1) Remove the torx screw attaching the inside handle to the door.

(2) Carefully pull the handle from the door.

(3) Disconnect the latch rods from the handle (Fig. 10).

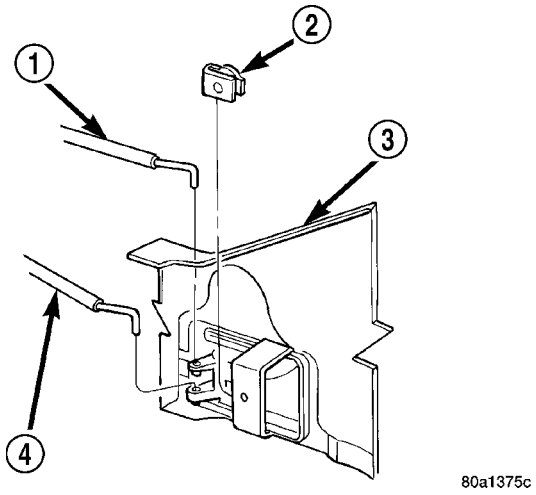

Fig. 10 INSIDE HANDLE ACTUATOR

1 - LOCK KNOB TO LATCH ROD
2 - U-NUT
3 - HALF DOOR TRIM PANEL
4 - INSIDE RELEASE HANDLE TO LATCH ROD

INSTALLATION

(1) Connect the latch rods to the handle.

(2) Position handle and seal in door.

(3) Install the torx screw attaching the inside handle the to door.

LATCH

REMOVAL

(1) Remove trim panel. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - REMOVAL)

(2) Roll window to full upward position.

(3) Disconnect the lock cylinder to latch rod. (Fig. 11)

(4) Disconnect the lock knob to latch rod.

(5) Disconnect the outside handle to latch release rod.

(6) Remove the screws attaching the latch to the door.

(7) Lower the latch in the door and disconnect the inside handle to latch rod.

(8) Remove the latch from the door.

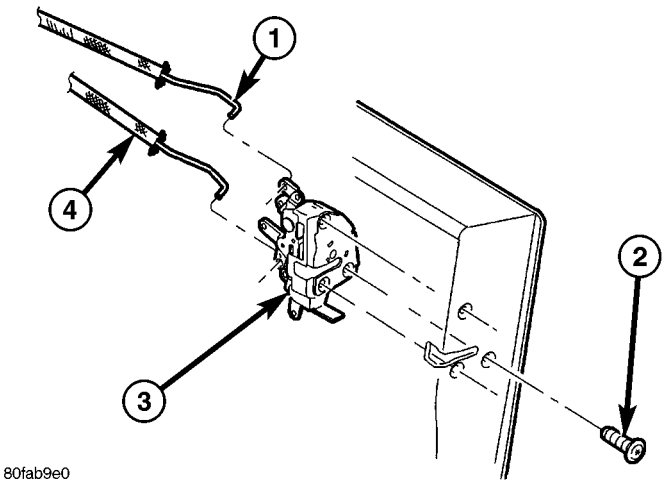

Fig. 11 DOOR LATCH ASSEMBLY

1 - RELEASE ROD
2 - SCREWS (3)
3 - LATCH ASSEMBLY
4 - LOCK ROD

INSTALLATION

(1) Position the latch in the door.

(2) Connect the inside handle to latch rod.

(3) Install the screws attaching the latch to the door.

(4) Position the door weatherstrip in place, apply adhesive as necessary.

(5) Connect the outside handle to latch rod.

(6) Connect the lock knob to latch rod.

(7) Connect the lock cylinder to latch rod.

(8) Install trim panel. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - INSTALLATION)

LATCH STRIKER

REMOVAL

(1) Remove the screws attaching the striker to the body.

(2) Separate the striker and the spacer from the body (Fig. 12).