HALF DOOR

TABLE OF CONTENTS

	page
DOOR	
REMOVAL	23
INSTALLATION	23
WINDOW	
REMOVAL	23
INSTALLATION	23
EXTERIOR HANDLE	
REMOVAL	24
INSTALLATION	24
HINGE	
DESCRIPTION	24
INSIDE HANDLE ACTUATOR	
REMOVAL	24
INSTALLATION	24
LATCH	
REMOVAL	24
INSTALLATION	25
LATCH STRIKER	
REMOVAL	25
INSTALLATION	25
LOCK CYLINDER	
REMOVAL	25
INSTALLATION	25
TRIM PANEL	
REMOVAL	25
INSTALLATION	26

DOOR

REMOVAL

(1) Open the door.

(2) Disconnect the door restraint strap from the pin (Fig. 1).

(3) Remove the nuts at the door hinge pivots and lift the door from the body.

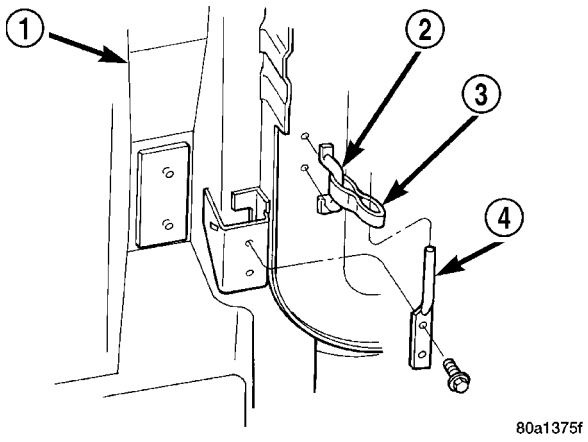

Fig. 1 RESTRAINT STRAP

1 - BODY
2 - FOOTMAN LOOP
3 - STRAP
4 - RESTRAINT PIN

INSTALLATION

(1) Position the door in the hinge and install the nuts.

(2) Connect the door restraint strap at the pin.

(3) Check for proper operation.

WINDOW

REMOVAL

(1) Open the door.

(2) Grasp the window at both front and rear edges and firmly lift upward (Fig. 2).

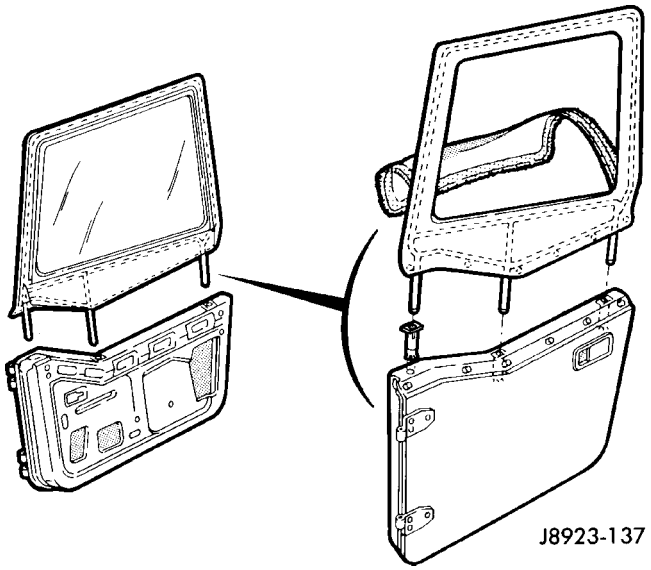

Fig. 2 HALF WINDOW

INSTALLATION

(1) Starting at the most forward alignment pin, position the window alignment pins into the restraint sleeves and push downward until seated.