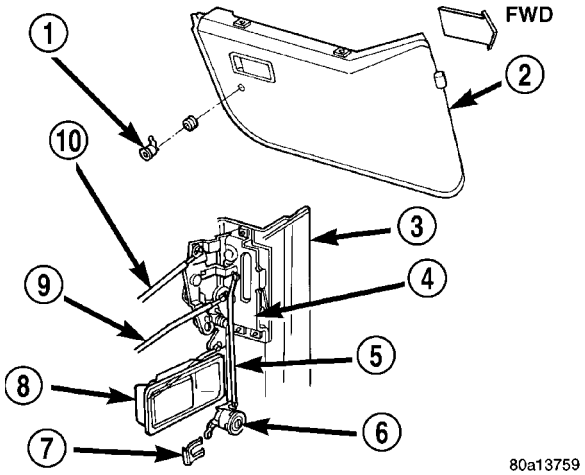

Fig. 4 HALF DOOR LATCH RODS

1 - LOCK CYLINDER
2 - HALF DOOR
3 - HALF DOOR
4 - LATCH
5 - LOCK CYLINDER TO LATCH ROD
6 - LOCK CYLINDER
7 - RETAINER
8 - OUTSIDE HANDLE
9 - INSIDE HANDLE TO LATCH ROD
10 - INSIDE LOCK TO LATCH ROD

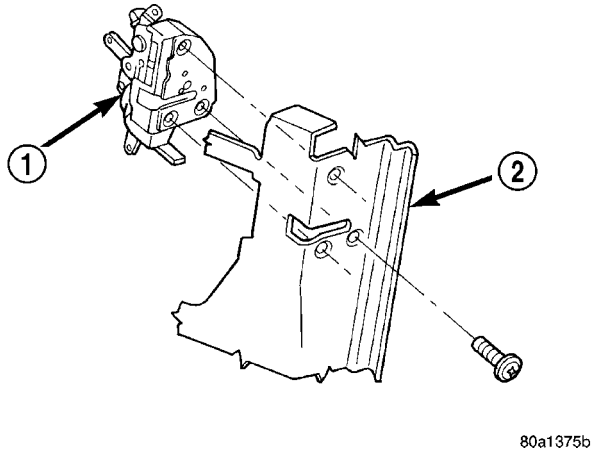

Fig. 5 DOOR LATCH

1 - LATCH
2 - HALF DOOR

INSTALLATION

(1) Position the latch in the door.
(2) Connect the inside handle to latch rod.
(3) Install the screws attaching the latch to the door.
(4) Position the door weatherstrip in place, apply adhesive as necessary.
(5) Connect the outside handle to latch rod.
(6) Connect the lock knob to latch rod.
(7) Connect the lock cylinder to latch rod (Fig. 4).
(8) Install trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - INSTALLATION)

LATCH STRIKER

REMOVAL

(1) Remove the screws attaching the striker to the body.
(2) Separate the striker and the spacer from the body (Fig. 6).

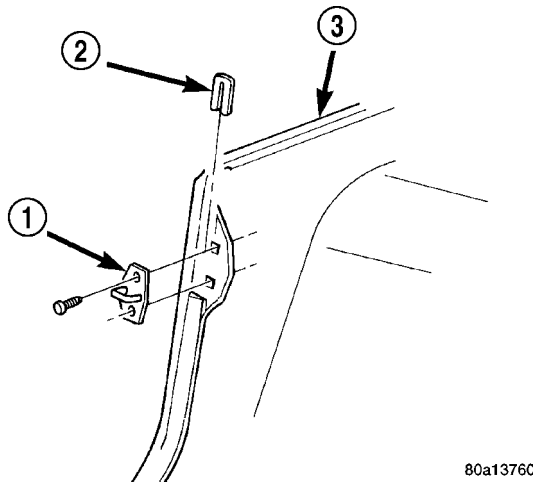

Fig. 6 LATCH STRIKER

1 - STRIKER
2 - SPACER
3 - BODY

INSTALLATION

(1) Position the striker and the spacer on the body.
(2) Install the screws attaching the striker and spacer to the body.

LOCK CYLINDER

REMOVAL

(1) Remove trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - REMOVAL)
(2) Disconnect lock cylinder to latch rod (Fig. 4).
(3) Remove lock cylinder retaining clip.
(4) Remove the lock cylinder from the door.

INSTALLATION

(1) Install the lock cylinder in the door.
(2) Install lock cylinder retaining clip.
(3) Connect lock cylinder to latch rod.
(4) Install trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - INSTALLATION)

TRIM PANEL

REMOVAL

(1) Remove half door window. (Refer to 23 - BODY/HALF DOOR/WINDOW - REMOVAL)