BODY SIDE GUARD

REMOVAL

(1) Remove the bolts from the lower support tabs. (Fig. 9)

(2) Remove the side bolts and remove the side guard. (Fig. 10)

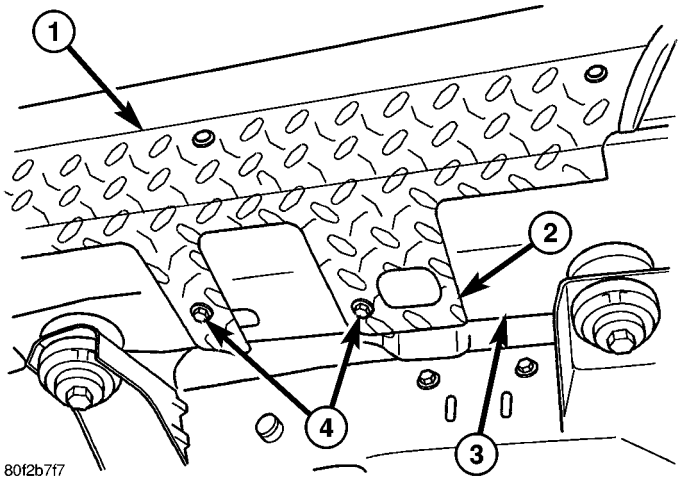

Fig. 9 SIDE GUARD - LOWER

1 - BODY SIDE GUARD
2 - SUPPORT TABS (5)
3 - BODY FLOOR SILL
4 - BOLTS (5)

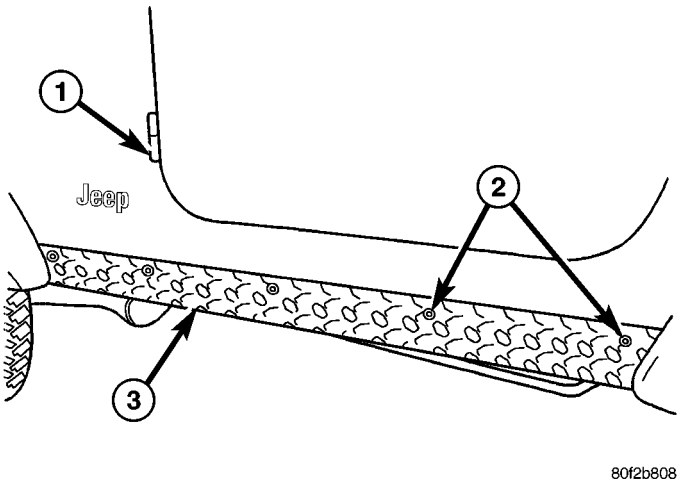

Fig. 10 SIDE GUARD - UPPER

1 - DOOR
2 - SIDE GUARD BOLTS (5)
3 - BODY SIDE GUARD

INSTALLATION

(1) Install the body side guard and install the side bolts.

(2) Tighten the bolts to 5 N·m (45 in. lbs.).

(3) Install the support tab bolts and tighten to 11 N·m (8 ft. lbs.).

SIDE STEP

REMOVAL

(1) Remove the bolts that attach the side step to the frame (Fig. 11).

(2) Tilt the step down and disengage the tabs from the frame slots.

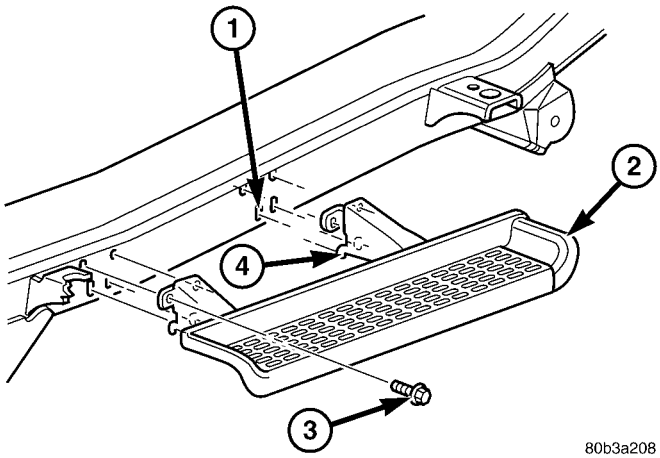

Fig. 11 SIDE STEP

1 - FRAME SLOTS
2 - SIDE STEP
3 - BOLTS
4 - STEP MOUNTING TABS

INSTALLATION

(1) Position the side step on the frame and engage the mounting tabs into the frame slots.

(2) Install the bolts that attach the side step to the frame and tighten to 21 N·m (15 ft. lbs.).

LICENSE PLATE BRACKET

REMOVAL

(1) If installed, remove the license plate.

(2) Remove the four screws attaching the license plate bracket to the body (Fig. 12).

(3) On export models remove the bolts and nuts. (Fig. 13)

(4) Separate the bracket from the body.

(5) Disconnect the electrical connectors, if equipped.