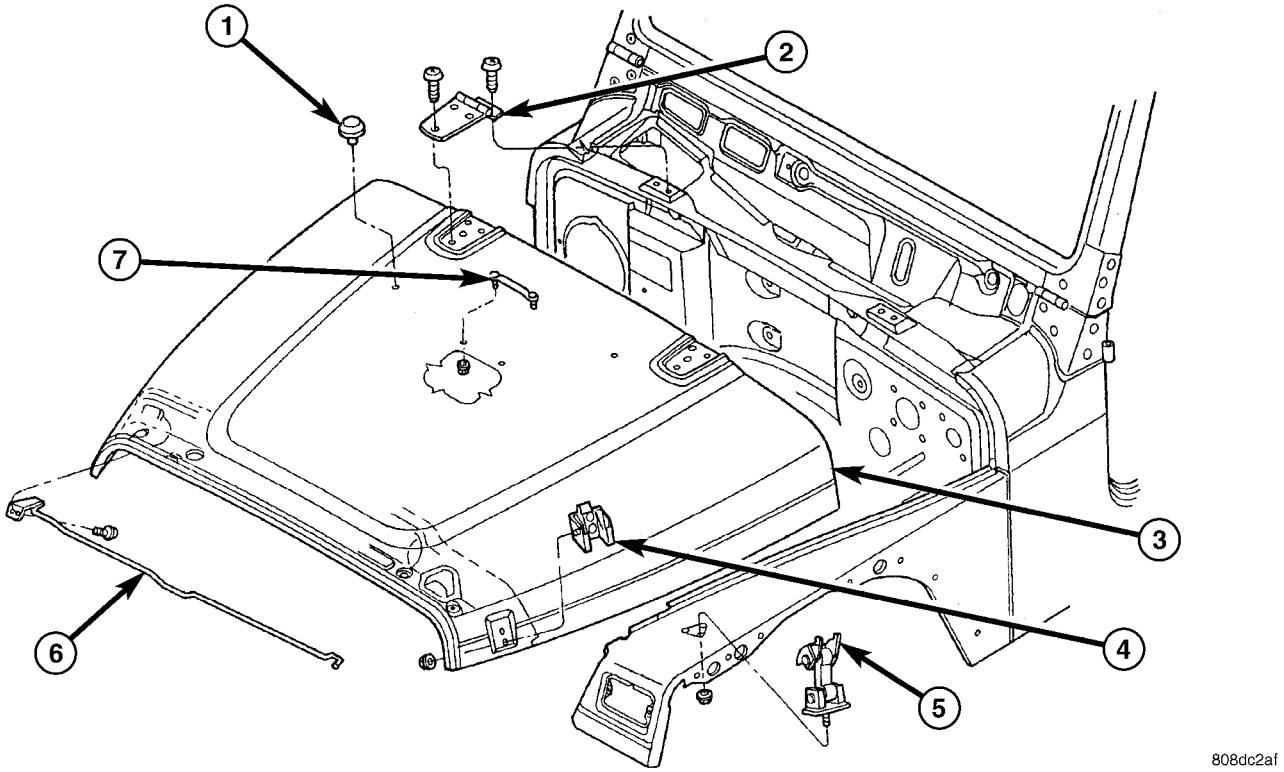

Fig. 1 HOOD COMPONENTS

1 - WINDSHIELD REST BUMPER
2 - HOOD HINGE
3 - HOOD
4 - HOOD CATCH BRACKET
5 - HOOD CATCH
6 - PROP ROD
7 - WINDSHIELD HOOD DOWN LOOP

INSTALLATION

(1) Position the hood on the vehicle and install the screws attaching the hinge to the hood.
(2) Align the hinges with the installation reference marks on the hood and tighten the hinge screws to 24 N·m (18 ft. lbs.).
(3) Connect the underhood lamp wire harness connector.
(4) Connect the windshield washer nozzles.
(5) Connect the ground strap.

ADJUSTMENTS

ADJUSTMENT

The hood hinge screw holes are oversized to facilitate hood adjustment movement.
(1) Loosen the screws.
(2) Move the hood in the direction(s) required for correct alignment.
(3) Tighten the screws.

HOOD SAFETY LATCH

REMOVAL

(1) Raise and support the hood.
(2) Remove the bolt attaching the safety latch to the hood (Fig. 2).
(3) Remove the latch from the hood.

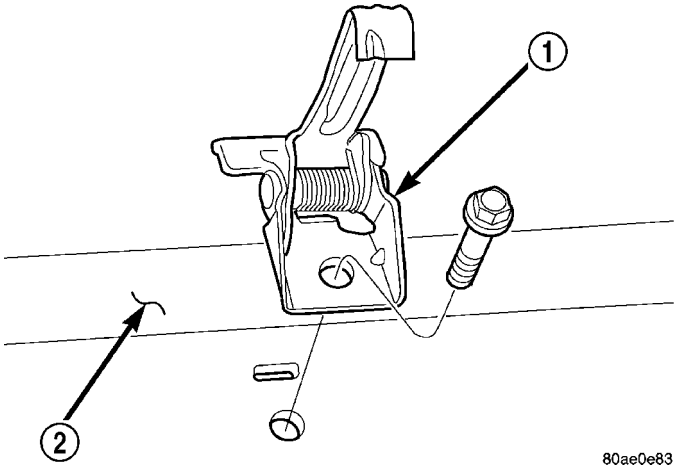

Fig. 2 HOOD SAFETY LATCH

1 - SAFETY LATCH
2 - HOOD

INSTALLATION

(1) Position the latch on the hood.
(2) Install the bolt attaching the safety latch to the hood and tighten to 9 N·m (80 in. lbs.).
(3) Remove the support rod and close the hood.