INSTRUMENT PANEL

TABLE OF CONTENTS

page

ACCESSORY SWITCH BEZEL
REMOVAL 39
INSTALLATION 40
AXLE LOCK SWITCH
DESCRIPTION 40
OPERATION 40
DIAGNOSIS AND TESTING - AXLE LOCK SWITCH 40
REMOVAL 41
INSTALLATION 41
BASE TRIM
REMOVAL 42
INSTALLATION 42
CENTER BEZEL
REMOVAL 43
INSTALLATION 43
CLUSTER BEZEL
REMOVAL 44
INSTALLATION 44
GLOVE BOX
REMOVAL 45
DISASSEMBLY 45
ASSEMBLY 46
INSTALLATION 46
GLOVE BOX CHECK STRAP
REMOVAL 47
INSTALLATION 47
GLOVE BOX LATCH STRIKER
REMOVAL 47
INSTALLATION 48
GRAB HANDLE
REMOVAL 48
INSTALLATION 48
GRAB HANDLE BEZEL
REMOVAL 49
INSTALLATION 49
INSTRUMENT PANEL ASSEMBLY
REMOVAL 49
INSTALLATION 51
STEERING COLUMN OPENING COVER
REMOVAL 51
INSTALLATION 52
TOP COVER
REMOVAL 52
INSTALLATION 53

ACCESSORY SWITCH BEZEL

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the center bezel from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ CENTER BEZEL - REMOVAL).

(3) Remove the four screws that secure the accessory switch bezel to the instrument panel (Fig. 1).

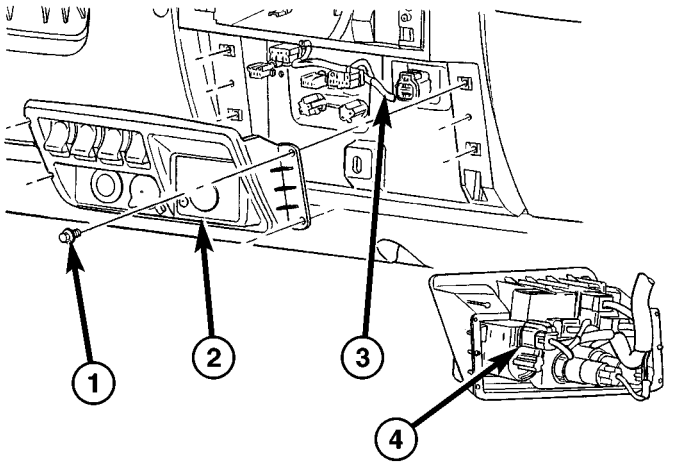

Fig. 1 ACCESSORY SWITCH BEZEL

1 - BEZEL SCREWS (4)
2 - BEZEL
3 - WIRE HARNESS
4 - ELECTRICAL CONNECTORS (7)

(4) Pull the accessory switch bezel away from the instrument panel far enough to access the instrument panel wire harness connectors.

(5) Disconnect the instrument panel wire harness connectors from the connector receptacles for the