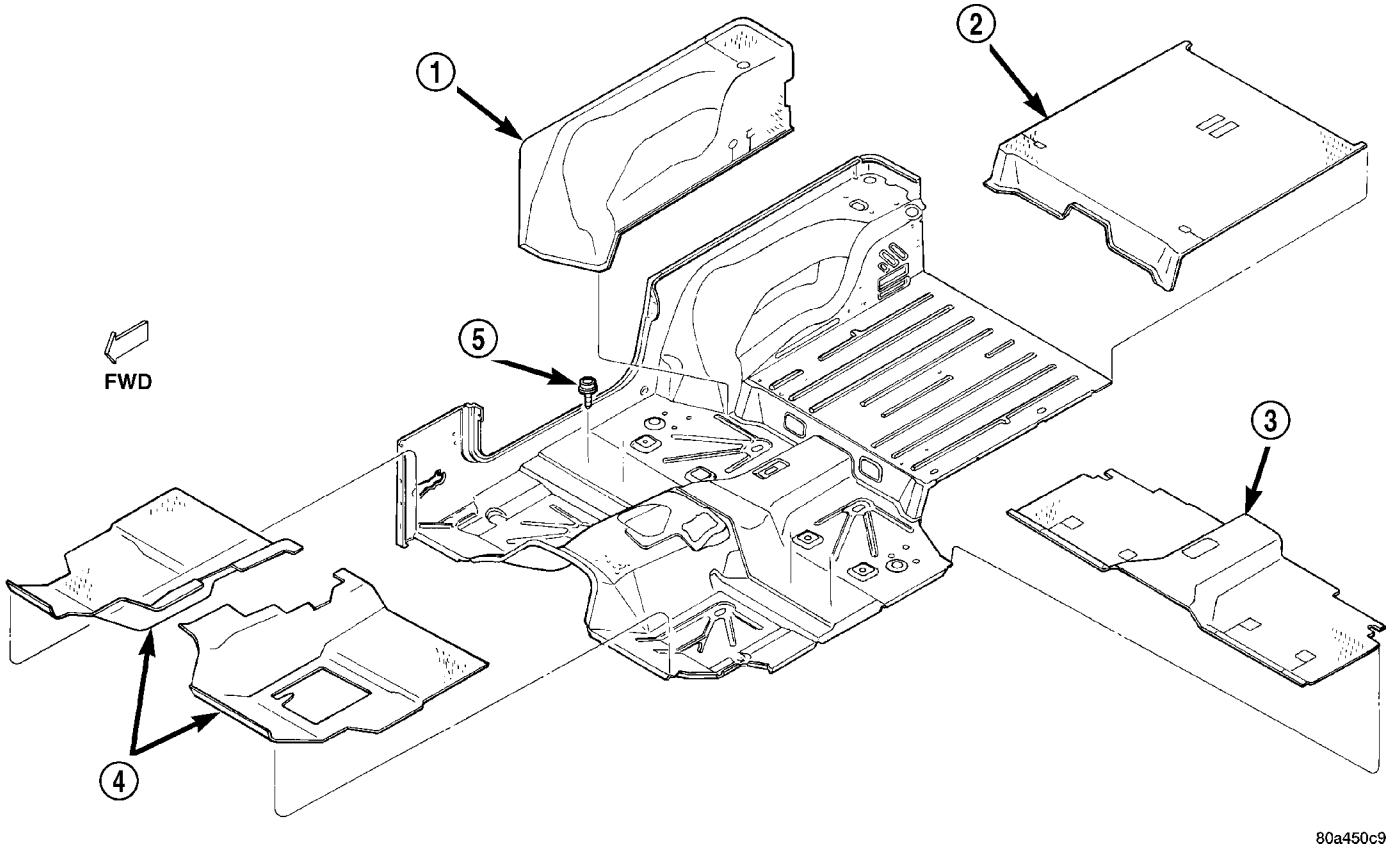

Fig. 3 VEHICLE CARPET

1 - WHEEL HOUSE CARPET
2 - CARGO AREA CARPET
3 - CENTER FLOOR CARPET
4 - FRONT FLOOR CARPET
5 - SNAP

INSTALLATION

(1) Position the carpet in the vehicle.
(2) Engage the snaps under front seats.

CARGO AREA CARPET

REMOVAL

(1) Position the rear seat in the fold and tumbled position.
(2) Pull the carpet from under the rear seat.
(3) Remove the Add-A-Trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - REMOVAL)
(4) Route the rear seat belt buckles through the cargo area carpet.
(5) Separate the carpet from the vehicle (Fig. 3).

INSTALLATION

(1) Position the carpet in the vehicle.
(2) Route the rear seat belt buckles through the cargo area carpet.
(3) Install the Add-A-Trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - INSTALLATION)
(4) Return the rear seat to the full rearward position.

WHEELHOUSE CARPET

REMOVAL

(1) Position the rear seat in the full forward position.
(2) Remove the Add-A-trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - REMOVAL)
(3) Grasp wheelhouse carpet and remove from vehicle (Fig. 3).

INSTALLATION

(1) Position wheelhouse carpet in vehicle and adjust as necessary.
(2) Install the Add-A-trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - INSTALLATION)
(3) Return the rear seat to the full rearward position.