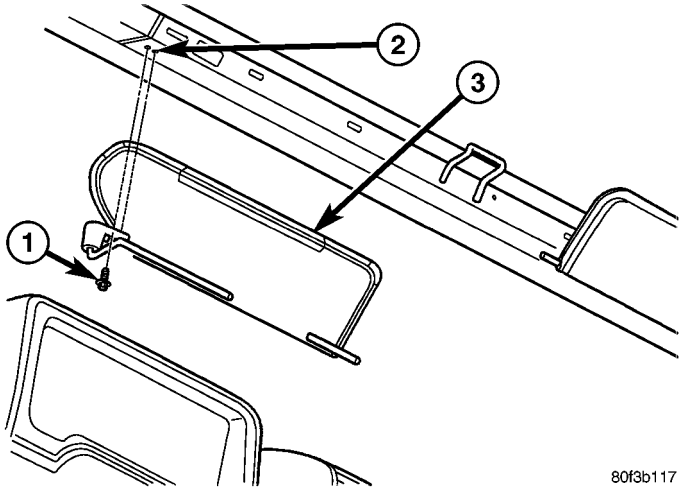

Fig. 5 SUNVISOR

1 - SCREWS (2)
2 - WINDSHIELD FRAME
3 - VISOR

INSTALLATION

(1) Position the sunvisor on the windshield frame and align the arm support bracket holes with the frame.

(2) Install the screws that attach the sunvisor arm support brackets to the frame. Tighten the screws securely.

SHIFT BEZEL - AUTOMATIC TRANSMISSION

REMOVAL

(1) Pull shift lever handle off of shift lever (Fig. 6).

(2) Using a trim stick C-4755 or equivalent, remove the shift bezel.

(3) Twist and remove the bezel light.

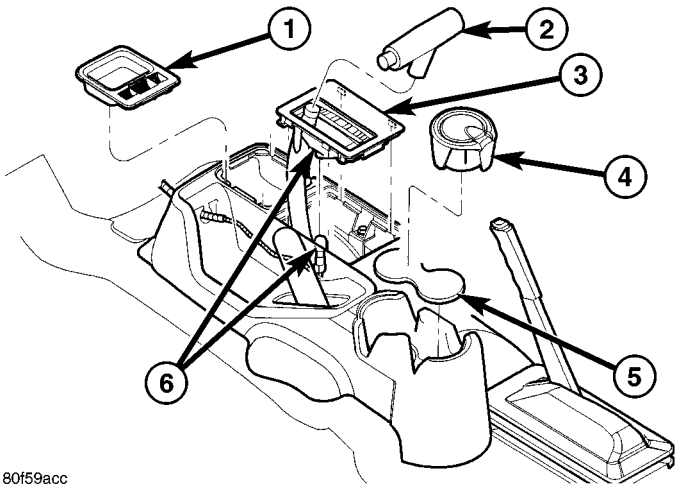

Fig. 6 SHIFT BEZEL

1 - COIN TRAY
2 - TRANSMISSION SHIFT LEVER HANDLE
3 - SHIFT BEZEL
4 - ASH RECEIVER (IF EQUIPPED)
5 - CUP HOLDER MAT
6 - SHIFT BEZEL LIGHT/SOCKET

INSTALLATION

(1) Connect the shift bezel light by twisting into socket on the bezel.

(2) Position the shift bezel over the shift lever and install onto the console.

(3) Align the shifter handle keyways and push handle onto the shifter until fully seated.

SHIFT BOOT

REMOVAL

(1) Using a trim stick C-4755 or equivalent, pry the shift boot from the bezel.

(2) Using a small flat blade, pry the shift pattern insert from the shift knob.

(3) Remove the nut attaching the shift knob to the shift lever (Fig. 7).

(4) Remove the knob and slide the shift boot from the shift lever.