INSTALLATION

(1) Connect the electrical connector and install console tower assembly over the park brake lever, if equipped.
(2) Install the tower bolts.
(3) Install the mini console assembly over the transmission and transfer case shifters.
(4) Install the console bolts.
(5) Connect the air bag deactivation switch electrical connector and install the switch, if equipped.
(6) Connect the air bag deactivation switch electrical connector and install the switch, if equipped.
(7) Install the auto transmission shift bezel, if equipped. (Refer to 23 - BODY/INTERIOR/SHIFT BEZEL - INSTALLATION)
(8) Install the manual transmission shift boot, if equipped. (Refer to 23 - BODY/INTERIOR/SHIFT BOOT - INSTALLATION)
(9) Install the cup holder and trim disc, if equipped. (Refer to 23 - BODY/INTERIOR/CENTER CONSOLE CUPHOLDER ASSEMBLY - INSTALLATION)

CENTER CONSOLE CUP HOLDER

REMOVAL

(1) Using a trim stick C-4755 or equivalent, remove the cup holder insert. (Fig. 10) and (Fig. 8)
(2) On mini console equipped models remove the bolt and remove the cup holder. (Fig. 8)

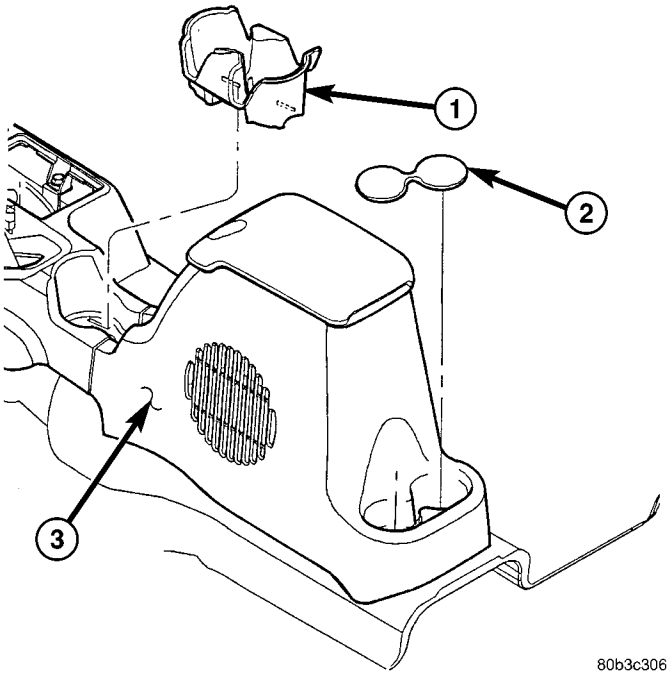

Fig. 10 FULL CONSOLE CUP HOLDER

1 - FULL CONSOLE CUP HOLDER
2 - TRIM PIECE
3 - CONSOLE TOWER

INSTALLATION

(1) On mini console equipped models install the cup holder and install the bolt.
(2) Tighten the bolt to 4 N·m (35 in lbs.).
(3) Install the cup holder insert.

CONSOLE LOCK CYLINDER

REMOVAL

(1) Open the console cover.
(2) Remove the screw that attaches the retainer to the lock and then remove the retainer from the lock (Fig. 11).
(3) Remove the lock cylinder from the console cover.