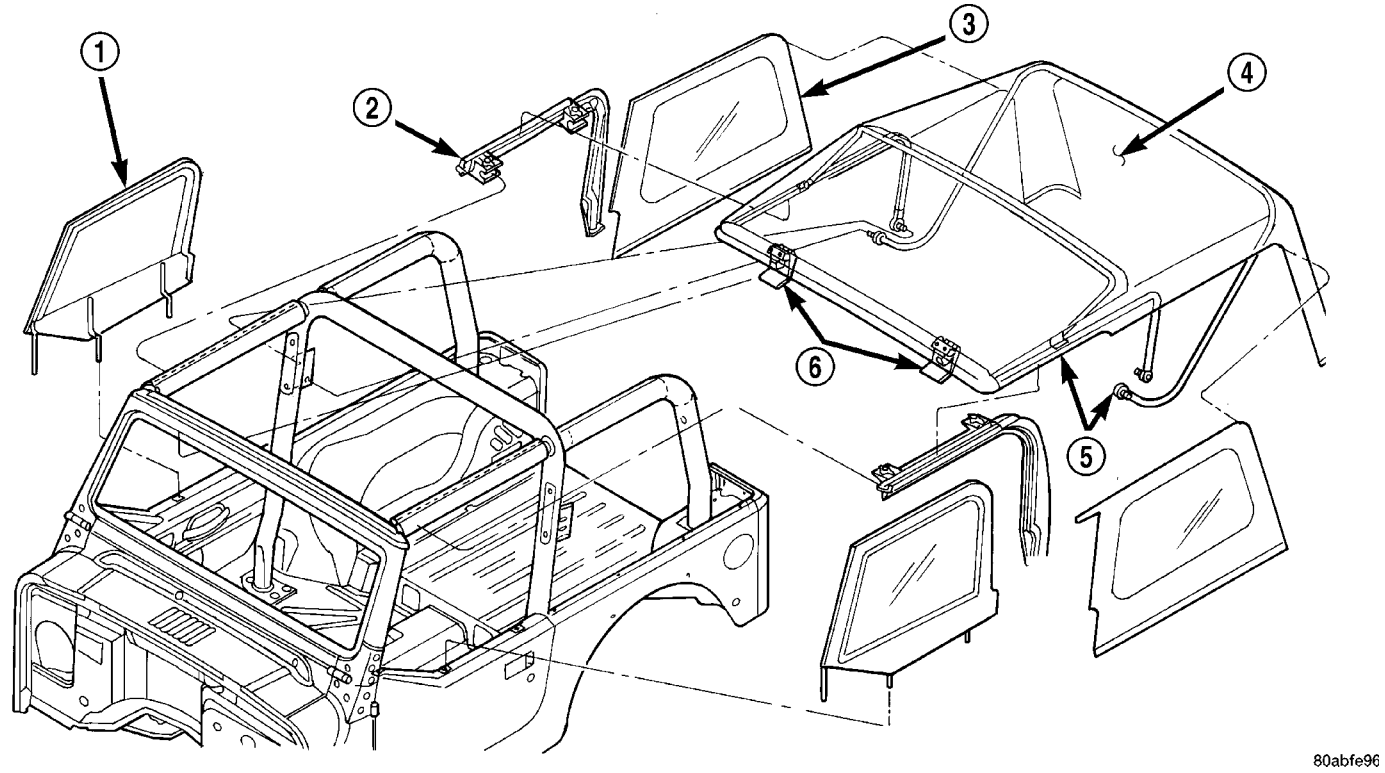

Fig. 7 SOFT TOP

1 - HALF DOOR WINDOW
2 - DOOR OPENING FRAME
3 - QUARTER WINDOW
4 - SOFT TOP
5 - ROOF BOW
6 - LATCH REINFORCEMENT

INSTALLATION

(1) Position the top on the vehicle.
(2) Install the screws attaching the roof bows to the pivot bracket. (The front bow is attached to the pivot bracket on the upper outward location).
(3) Raise the top.
(4) Position latch in windshield frame.
(5) Install the quarter windows.
(6) Working from front to rear, engage the J-straps attaching the quarter window to the body.
(7) Install rear window.
(8) Engage drip rail retainers above door opening frame.
(9) Working from front to rear, engage J-straps at soft top rear corners.
(10) Engage the retainers attaching the rear window to the body.
(11) Close latch at windshield frame.

SOFT TOP FABRIC

REMOVAL

(1) Disengage the snaps attaching the soft top fabric to the rear roof bow.
(2) Disengage the hook and loop fastener attaching soft top fabric to the center roof bow.
(3) Lower the soft top.
(4) Remove the screws attaching the soft top fabric to the front roof bow and fold back fabric.
(5) Separate the soft top fabric from the frame.

INSTALLATION

(1) Position the soft top fabric on the frame.
(2) Install the screws attaching the soft top fabric to the front roof bow.
(3) Engage the hook and loop fastener attaching soft top fabric to the center roof bow.
(4) Engage the snaps attaching the soft top fabric to the rear roof bow.
(5) Raise and secure the soft top.

DOOR OPENING FRAME

REMOVAL

Vehicles equipped with a soft top require a door opening frame to complete the seal for the soft top door assembly.
(1) Lower the top to the rearward position.
(2) Turn the knobs located on top of the door opening frame counter clockwise and remove completely (Fig. 8).
(3) Pull door opening frame outward and up. Separate from vehicle.