SEATS

TABLE OF CONTENTS

page

FRONT SEAT
REMOVAL 73
INSTALLATION 74
FRONT SEAT BACK
REMOVAL 74
INSTALLATION 74
FRONT SEAT BACK COVER
REMOVAL 75
INSTALLATION 75
FRONT SEAT CUSHION COVER
REMOVAL 75
INSTALLATION 75
FRONT SEAT BACK RECLINER/COVER
REMOVAL 75
INSTALLATION 75
FRONT SEAT BACK RECLINER CABLE
REMOVAL 76
INSTALLATION 76
FRONT SEAT FOLDING RELEASE CABLE
REMOVAL 76
INSTALLATION 77
FRONT SEAT BACK DUMP CABLE
REMOVAL 77
INSTALLATION 77

page

FRONT SEAT TRACK ADJUSTER
REMOVAL 77
INSTALLATION 78
REAR SEAT
REMOVAL 78
INSTALLATION 79
REAR SEAT BACK
REMOVAL 79
INSTALLATION 79
REAR SEAT BACK HINGE
REMOVAL 79
INSTALLATION 80
REAR SEAT BACK COVER
REMOVAL 80
INSTALLATION 80
REAR SEAT CUSHION COVER
REMOVAL 81
INSTALLATION 81
REAR SEAT RELEASE CABLE
REMOVAL 81
INSTALLATION 81
REAR SEAT STRIKERS
REMOVAL 81
INSTALLATION 82

FRONT SEAT

REMOVAL

(1) Disengage seat belt electrical connector (Fig. 1).
(2) Remove the bolts attaching the seat adjuster to the floor panel (Fig. 2).
(3) Remove the seat from the vehicle.

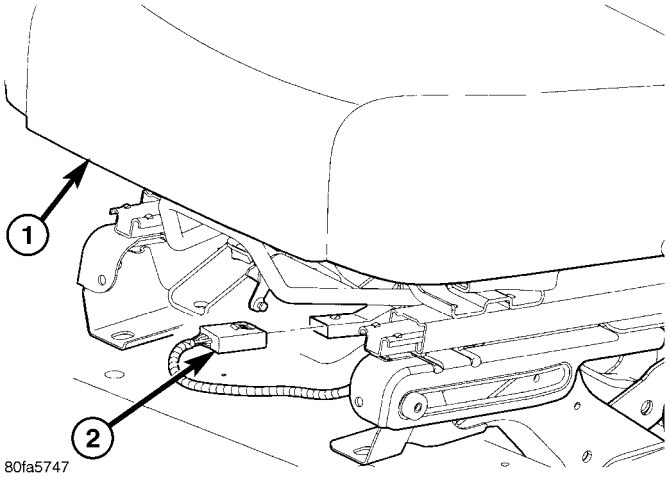

Fig. 1 SEAT BELT ELECTRICAL

1 - FRONT SEAT
2 - SEAT BELT ELECTRICAL CONNECTOR