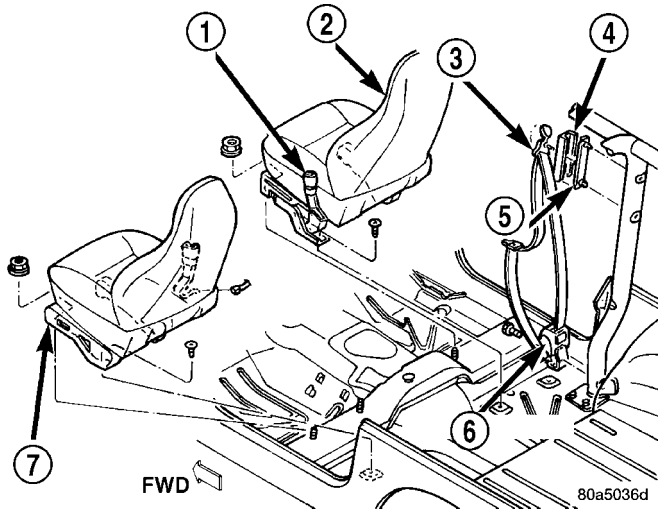

Fig. 2 BUCKET SEAT REMOVAL

1 - BUCKLE
2 - SEAT
3 - TURNING LOOP
4 - COVER
5 - ADJUSTER
6 - RETRACTOR
7 - MOUNTING BRACKET

INSTALLATION

(1) Position the seat in the vehicle.

(2) Install the bolts attaching the rear of seat frame to the floor panel. Tighten outboard bolt to 33 N·m (25 ft. lbs.). Tighten inboard bolt to 74 N·m (55 ft. lbs.).

(3) Install the bolts attaching the front of seat frame to the floor panel and tighten bolts to 33 N·m (25 ft. lbs.).

(4) Engage seat belt electrical connector.

FRONT SEAT BACK

REMOVAL

(1) Remove seat. (Refer to 23 - BODY/SEATS/ FRONT SEAT - REMOVAL)

(2) Disengage the j-straps at the lower edge of the seat back and position the seat back cover aside.

(3) Using a small flat bladed tool, release the hinge cover retaining tab and remove. (Fig. 3)

(4) Disconnect the recliner cables. (Fig. 4)

(5) Remove the upper recliner bolts and remove the seat back

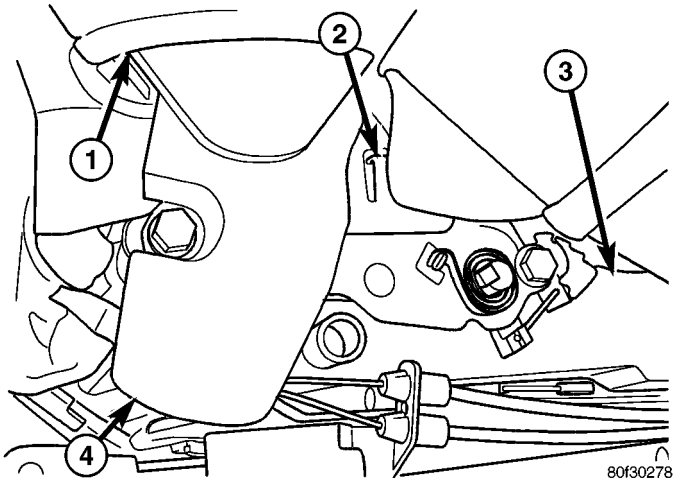

Fig. 3 SEAT BACK HINGE COVER

1 - SEAT BACK COVER
2 - RECLINER COVER RETAINING TAB
3 - SEAT CUSHION FRAME
4 - RECLINER COVER

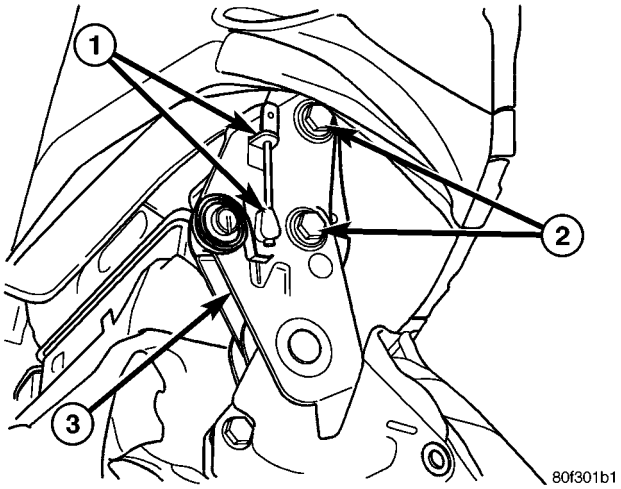

Fig. 4 SEAT BACK HINGE

1 - DUMP CABLE CONNECTIONS
2 - SEAT BACK BOLTS (4)
3 - SEAT BACK RECLINER

INSTALLATION

(1) Position the seatback on the seat cushion.

(2) Passenger seat and driver dumping seat:

(a) Engage seat dump cable to clip on recliner.

(3) Install the bolts attaching the recliner to the seat cushion frame.

(4) Engage the seat cushion corner cover j-retainers.

(5) Engage the retainers attaching the cushion cover to the outboard seat cushion frame.

(6) Install seat. (Refer to 23 - BODY/SEATS/ FRONT SEAT - INSTALLATION)