FRONT SEAT BACK RECLINER CABLE

REMOVAL

(1) Remove seat cushion cover. (Refer to 23 - BODY/SEATS/SEAT CUSHION COVER - REMOVAL)

(2) Disengage cable from recliner release handle. (Fig. 6) and (Fig. 7)

(3) Route cable through seat cushion pad.

(4) Disengage cable from mounting bracket.

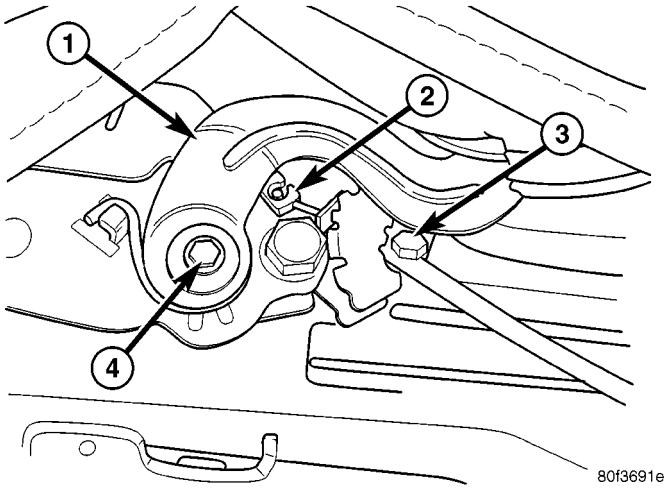

Fig. 6 RECLINER HANDLE/CABLE

1 - RECLINER HANDLE
2 - RECLINER CABLE END
3 - RECLINER CABLE
4 - RECLINER HANDLE BOLT

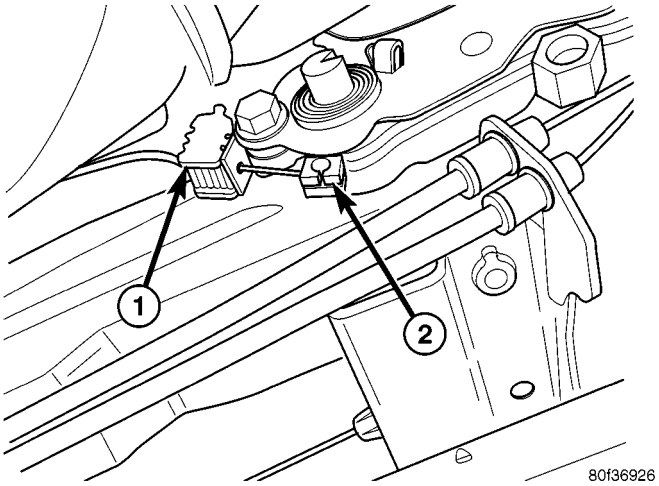

Fig. 7 RECLINER CABLE END

1 - RECLINER CABLE
2 - RECLINER CABLE END

INSTALLATION

(1) Engage cable to mounting bracket.

(2) Route cable through seat cushion pad.

(3) Engage cable to recliner release.

(4) Install seat back cover. (Refer to 23 - BODY/SEATS/FRONT SEAT BACK COVER - INSTALLATION)

FRONT SEAT FOLDING RELEASE CABLE

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/SEAT - REMOVAL)

(2) Disconnect the release cable folding end. (Fig. 8)

(3) Remove the inboard recliner. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - REMOVAL)

(4) Disconnect the release cable assembly at the inboard recliner, from the support bracket. (Fig. 9)

(5) Disconnect the cable assembly at the slider and remove. (Fig. 10)

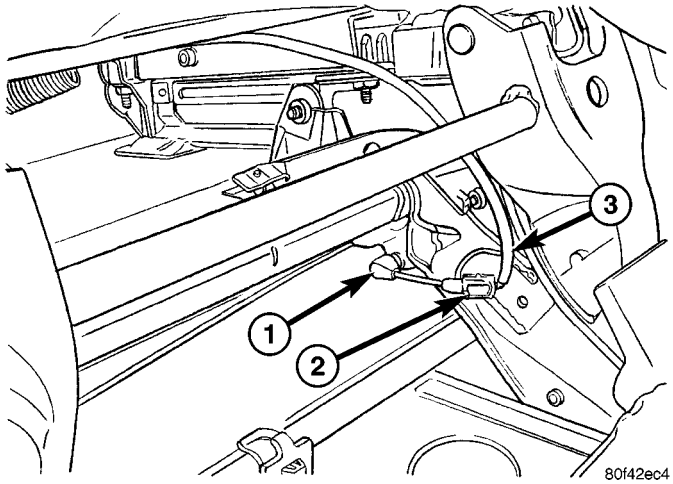

Fig. 8 RELEASE CABLE/FOLDING END

1 - CABLE END CLIP
2 - CABLE HOUSING
3 - CABLE ASSEMBLY