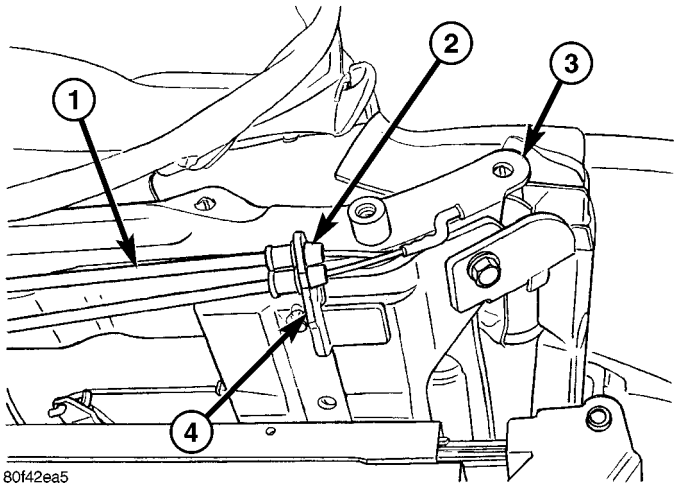

Fig. 9 RELEASE CABLE/RECLINER END

1 - CABLE ASSEMBLY
2 - CABLE HOUSING
3 - SEAT CUSHION FRAME
4 - CABLE SUPPORT BRACKET

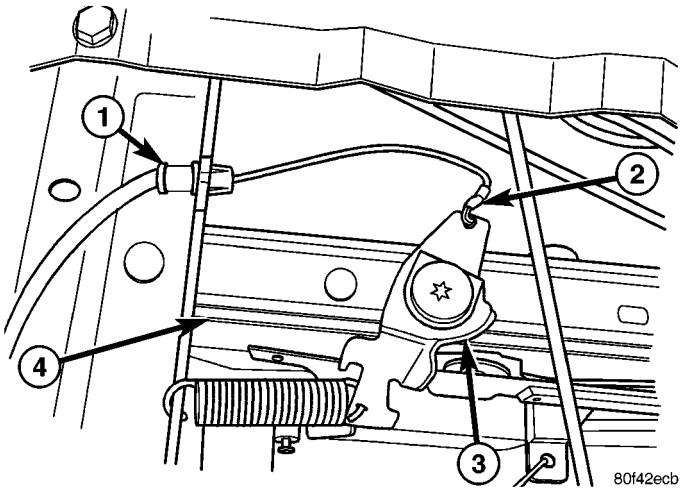

Fig. 10 RELEASE CABLE/SLIDER END

1 - CABLE HOUSING
2 - CABLE END
3 - SLIDER
4 - SEAT CUSHION FRAME

INSTALLATION

(1) Connect the cable assembly at the slider.

(2) Connect the inboard release cable assembly to the support bracket at the recliner.

(3) Install the inboard recliner. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - INSTALLATION)

(4) Connect the folding end of the release cable assembly.

(5) Install the seat. (Refer to 23 - BODY/SEATS/SEAT - INSTALLATION)

FRONT SEAT BACK DUMP CABLE

REMOVAL

(1) Remove the seat back cover. (Refer to 23 - BODY/SEATS/FRONT SEAT BACK COVER - REMOVAL)

(2) Disconnect the dump cables from the recliners. (Fig. 4)

(3) Remove the two dump handle assembly screws and remove the release cable assembly.

INSTALLATION

(1) Install the dump handle assembly and install the two screws.

(2) Connect the dump cables at the recliners.

(3) Install the seat back cover. (Refer to 23 - BODY/SEATS/SEAT BACK COVER - INSTALLATION)

FRONT SEAT TRACK ADJUSTER

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/SEAT - REMOVAL)

(2) Position aside the seat back cover. (Refer to 23 - BODY/SEATS/SEAT BACK COVER - REMOVAL)

(3) Remove the recliner covers. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - REMOVAL)

(4) Position aside the seat cushion cover. (Refer to 23 - BODY/SEATS/SEAT CUSHION COVER - REMOVAL)

(5) Disconnect the recliner cable ends. (Fig. 11) and (Fig. 12)

(6) Remove the seat cushion to hinge bolts. (Fig. 11) and (Fig. 12)

(7) Disconnect the folding release cable from the seat back recliner, if equipped. (Fig. 11)

(8) Remove the seat back assembly.

(9) Remove the two bolts on either side of the seat cushion and remove the seat track assembly. (Fig. 13)