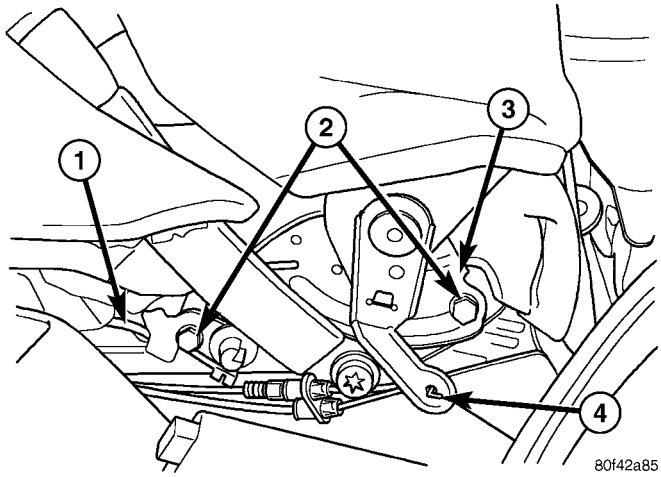


*Fig. 11 INBOARD SEAT CUSHION AND HINGE*

1 - RECLINER CABLE
2 - SEAT CUSHION FRAME BOLTS
3 - SEAT CUSHION FRAME
4 - FOLDING RELEASE CABLE ASSEMBLY END

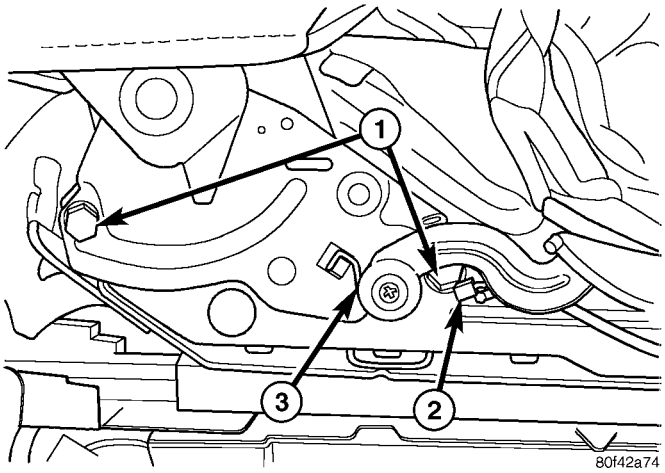


*Fig. 12 SEAT CUSHION AND HINGE*

1 - SEAT CUSHION FRAME BOLTS
2 - RECLINER CABLE END
3 - RECLINER HANDLE

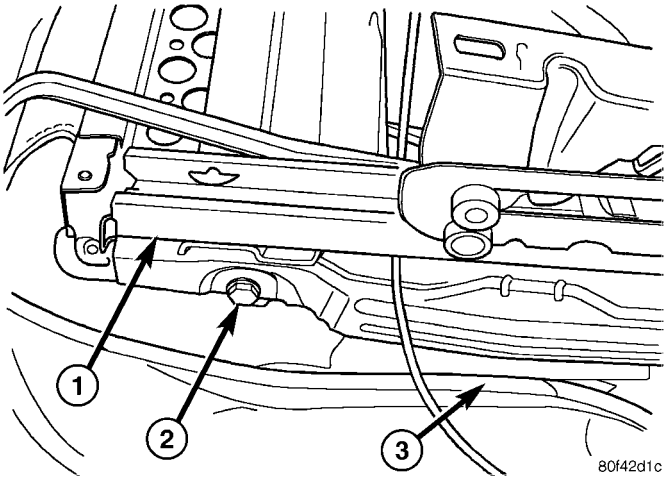


*Fig. 13 FRONT SEAT CUSHION BOLTS*

1 - SEAT TRACK
2 - SEAT CUSHION FRAME BOLT
3 - SEAT CUSHION

### INSTALLATION

(1) Install the seat track assembly and install the two front bolts.

(2) Install the seat back assembly.

(3) Connect the folding release cable assembly end to the seat back recliner.

(4) Install the seat back assembly bolts.

(5) Tighten the seat track bolts to 50 N·m (37 ft. lbs.)

(6) Connect the recliner cables.

(7) Install the seat cushion cover. (Refer to 23 - BODY/SEATS/SEAT CUSHION COVER - INSTALLATION)

(8) Install the recliner covers. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - INSTALLATION)

(9) Install the seat back cover. (Refer to 23 - BODY/SEATS/SEAT BACK COVER - INSTALLATION)

(10) Install the seat. (Refer to 23 - BODY/SEATS/SEAT - INSTALLATION)

## REAR SEAT

### REMOVAL

(1) Remove the add-a-trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - REMOVAL)

(2) Using the latch handle, fold the seat back down and tip the seat assembly forward. (Fig. 14)

(3) Squeeze the release bar and disengage the front latches. (Fig. 15)

(4) Remove the seat through tailgate opening.