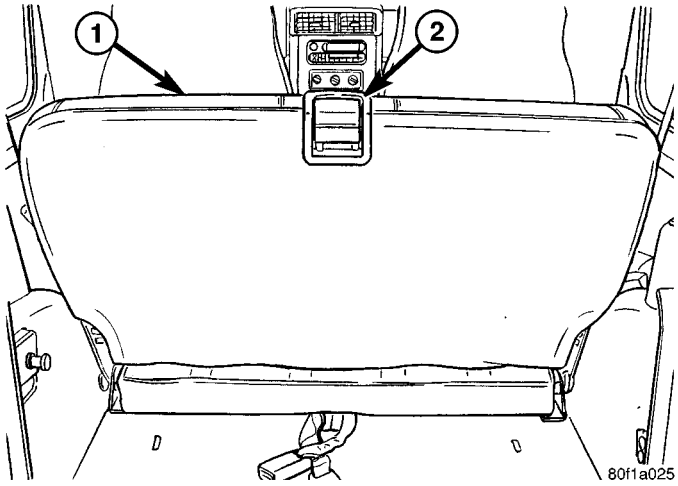


*Fig. 14 REAR SEAT BACK*

1 - REAR SEAT BACK
2 - RELEASE HANDLE

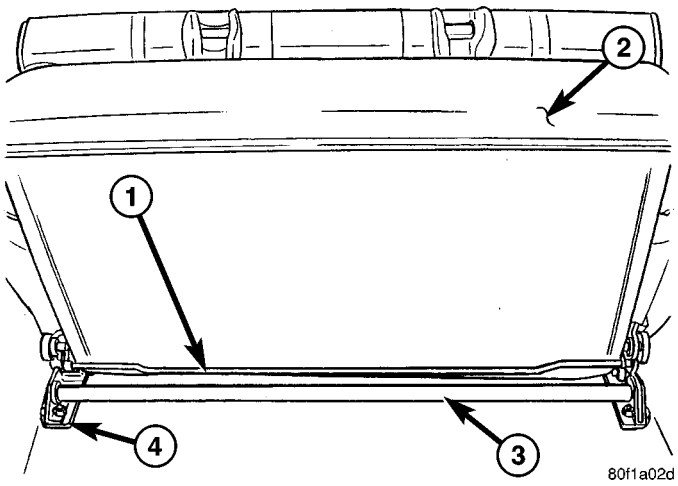


*Fig. 15 REAR SEAT RELEASE LATCH ROD*

1 - RELEASE LATCH ROD
2 - REAR SEAT CUSHION
3 - REAR SEAT LATCH ASSEMBLY
4 - REAR SEAT LATCH STRIKER (4)

## INSTALLATION

(1) Position the seat on the rear floor panel and engage the seat frame release latch with the front strikers.

(2) Roll seat back and engage the rear latches with the rear strikers.

(3) Return the seat back to the up position.

(4) Install the add-a-trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - INSTALLATION)

# REAR SEAT BACK

## REMOVAL

(1) Remove rear seat. (Refer to 23 - BODY/SEATS/REAR SEAT - REMOVAL)

(2) Remove the bolts attaching the seat back assembly to the seat cushion and remove the seat back. (Fig. 16)

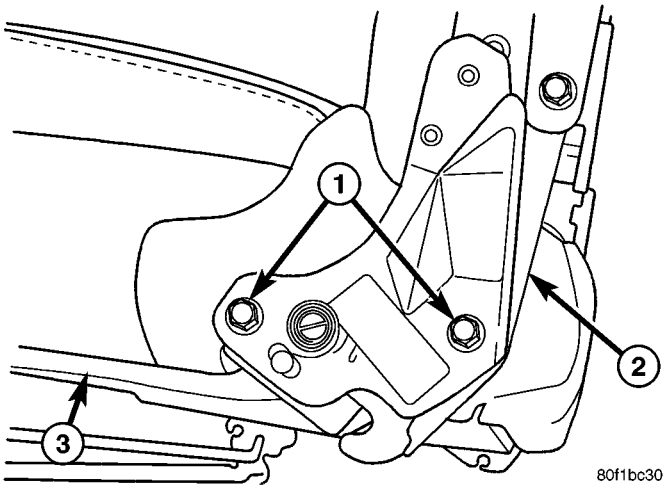


*Fig. 16 REAR SEAT BACK HINGE*

1 - SEAT CUSHION BOLTS
2 - SEAT BACK HINGE
3 - SEAT CUSHION

## INSTALLATION

(1) Position the seat back on the seat cushion and install the bolts.

(2) Tighten the bolts to 50 N·m (37 ft. lbs.).

(3) Install rear seat. (Refer to 23 - BODY/SEATS/REAR SEAT - INSTALLATION)

# REAR SEAT BACK HINGE

## REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/REAR SEAT - REMOVAL)

(2) Remove the lower hinge bolts. (Fig. 16)

(3) Disconnect the lower j-straps of the seat back and position aside the seat back cover.

(4) Disconnect the release cable. (Fig. 17)

(5) Remove the bolts and remove the hinge.