(2) Remove the bolts and remove the striker. (Fig. 23)

Front Strikers

(1) Remove the seat. (Refer to 23 - BODY/SEATS/ REAR SEAT - REMOVAL)

(2) Remove the bolts and remove the striker. (Fig. 23)

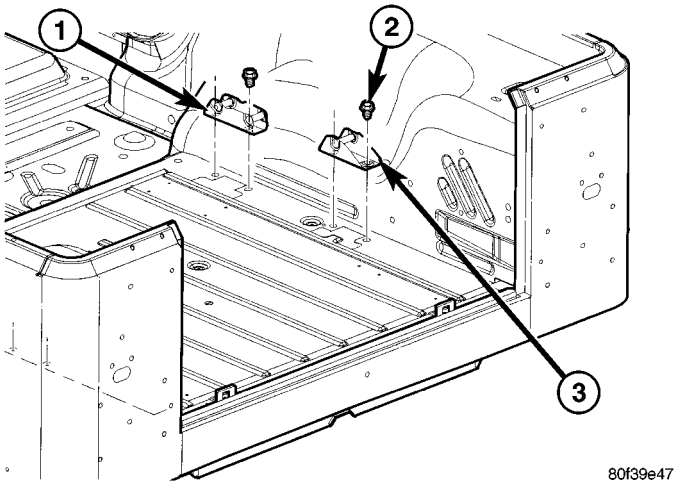

Fig. 23 REAR SEAT STRIKERS

1 - FRONT STRIKER
2 - BOLTS (2 PER STRIKER)
3 - REAR STRIKER

INSTALLATION

Front Strikers

(1) Install the striker and install the bolts.

(2) Tighten the bolts to 61 N·m (45 ft. lbs.).

(3) Install the seat. (Refer to 23 - BODY/SEATS/ REAR SEAT - INSTALLATION)

Rear Strikers

(1) Install the striker and install the bolts.

(2) Tighten the bolts to 61 N·m (45 ft. lbs.).

(3) Return the seat to the down position.