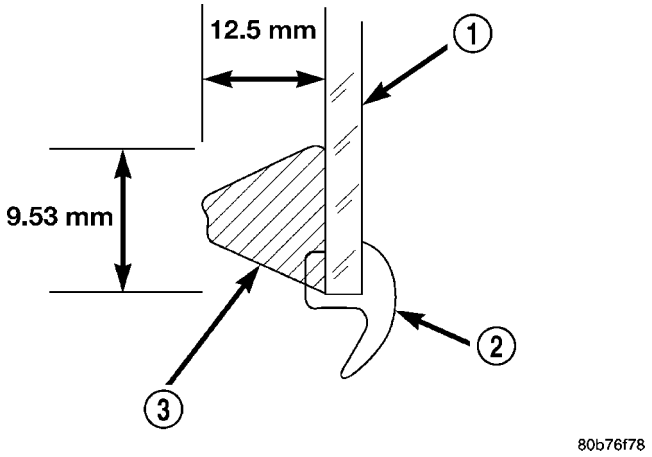

Fig. 4 URETHANE BEAD

1 - WINDSHIELD
2 - MOLDING
3 - URETHANE BEAD

WINDSHIELD HINGE

REMOVAL

NOTE: If both hinges are to be replaced, the windshield must be tilted to the full forward position. (Refer to 23 - BODY/STATIONARY GLASS/WINDSHIELD - REMOVAL)

(1) Remove door. (Refer to 23 - BODY/DOOR - FRONT/DOOR - REMOVAL)
(2) Remove the bolts attaching the hinge to the cowl (Fig. 5).
(3) Remove the bolts attaching the hinge to the windshield frame.
(4) Separate the hinge from the vehicle.

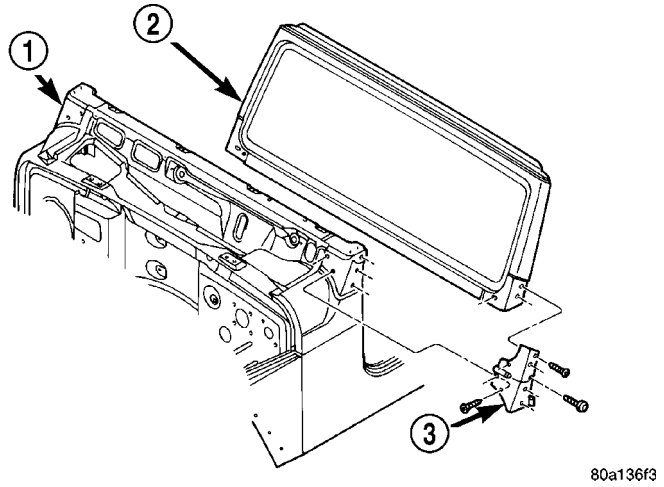

Fig. 5 WINDSHIELD HINGE

1 - COWL
2 - WINDSHIELD
3 - WINDSHIELD HINGE

INSTALLATION

(1) Paint as required.
(2) Clean the contact surface of the hinge and cowl with isopropyl alcohol or equivalent.
(3) Apply a 4 mm bead of Mopar® Vinyl Acrylic Sealant or equivalent around the perimeter of the hinge contact surface. The bead should be 10 mm inboard of the edge.
(4) Position the hinge on the vehicle.
(5) Install the bolts attaching the hinge to the windshield frame.
(6) Install the bolts attaching the hinge to the cowl.
(7) Ensure that the sealant provides complete coverage. Wipe away excess sealant.
(8) Install door. (Refer to 23 - BODY/DOOR - FRONT/DOOR - INSTALLATION)

WINDSHIELD FRAME

REMOVAL

(1) Unlatch top.
(2) Remove the bolts attaching the sport bar to the windshield frame.
(3) Remove the windshield wiper arms. (Refer to 8 - ELECTRICAL/WIPERS/WASHERS/WIPER ARMS - REMOVAL)
(4) Remove the torx screw closest to the hinge pivot point and tilt the windshield forward.
(5) Remove the torx screws attaching the windshield hinge to the windshield frame (Fig. 6).
(6) Separate the windshield frame from the vehicle.

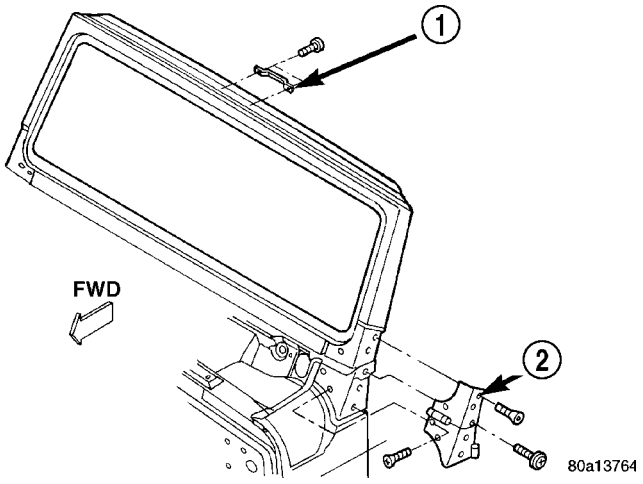

Fig. 6 WINDSHIELD FRAME

1 - WINDSHIELD HOLD DOWN LOOP
2 - WINDSHIELD HINGE

INSTALLATION

NOTE: Inspect windshield to cowl seal for damage and confirm correct position.

(1) Position the windshield frame on the vehicle.