WEATHERSTRIP / SEALS

TABLE OF CONTENTS

page

HOOD TO COWL WEATHERSTRIP
REMOVAL 88
INSTALLATION 88
FULL DOOR INNER BELT WEATHERSTRIP
DESCRIPTION - FULL DOOR INNER BELT WEATHERSTRIP 88
FULL DOOR OUTER BELT SEAL
REMOVAL 88
INSTALLATION 89
FULL DOOR WEATHERSTRIP
REMOVAL 89
INSTALLATION 89
HALF DOOR WEATHERSTRIP
REMOVAL 89
INSTALLATION 90
TAILGATE WEATHERSTRIP AND CHANNEL
REMOVAL 90
INSTALLATION 90
WINDSHIELD FRAME WEATHERSTRIP
REMOVAL 90
INSTALLATION 91

HOOD TO COWL WEATHERSTRIP

REMOVAL

(1) Carefully separate the weatherstrip from the cowl flange (Fig. 1).

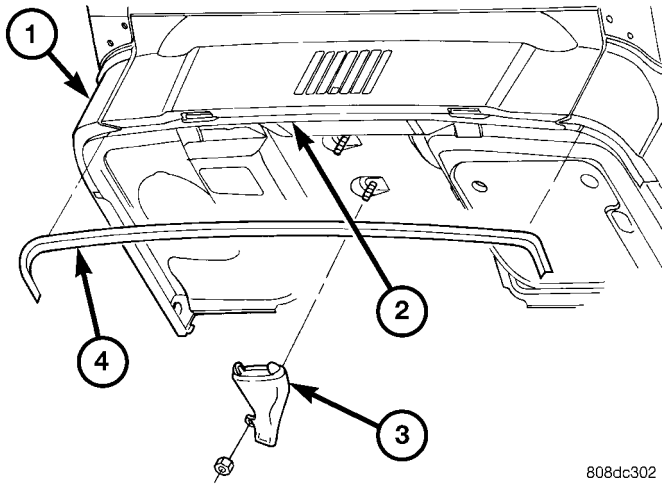

Fig. 1 HOOD TO COWL WEATHERSTRIP

1 - COWL
2 - COWL FLANGE
3 - COWL PLENUM DRAIN
4 - HOOD TO COWL WEATHERSTRIP

INSTALLATION

(1) Position the weatherstrip on the cowl flange and press it into place.

FULL DOOR INNER BELT WEATHERSTRIP

DESCRIPTION - FULL DOOR INNER BELT WEATHERSTRIP

The inner belt weatherstrip is attached to the door trim panel and is not serviceable. If the inner belt weatherstrip needs to be replaced, replace the door trim panel.

FULL DOOR OUTER BELT SEAL

REMOVAL

(1) Remove the door sail panel.
(2) Disengage the clips attaching the outer belt seal to the door (Fig. 2).
(3) Separate the seal from the door.