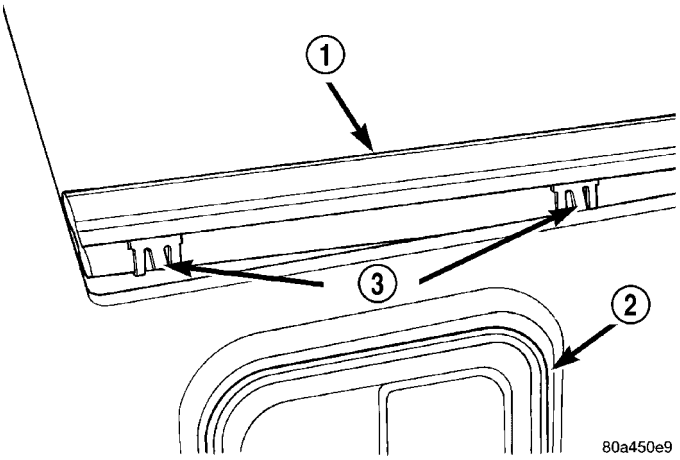

Fig. 2 FULL DOOR OUTER BELT SEAL

1 - OUTER BELTLINE WEATHERSTRIP
2 - OUTSIDE DOOR HANDLE
3 - CLIPS

INSTALLATION

(1) Position the seal on the door.
(2) Engage the clips attaching the outer belt seal to the door.
(3) Install the door sail panel.

FULL DOOR WEATHERSTRIP

REMOVAL

NOTE: The upper portion of the weatherstrip is seated into a channel around the window opening frame. The lower portion of the weatherstrip is attached to the door with push-in fasteners.

(1) Peel the weatherstrip from the channel.
(2) Remove the push-in fasteners attaching the weatherstrip to the door (Fig. 3).

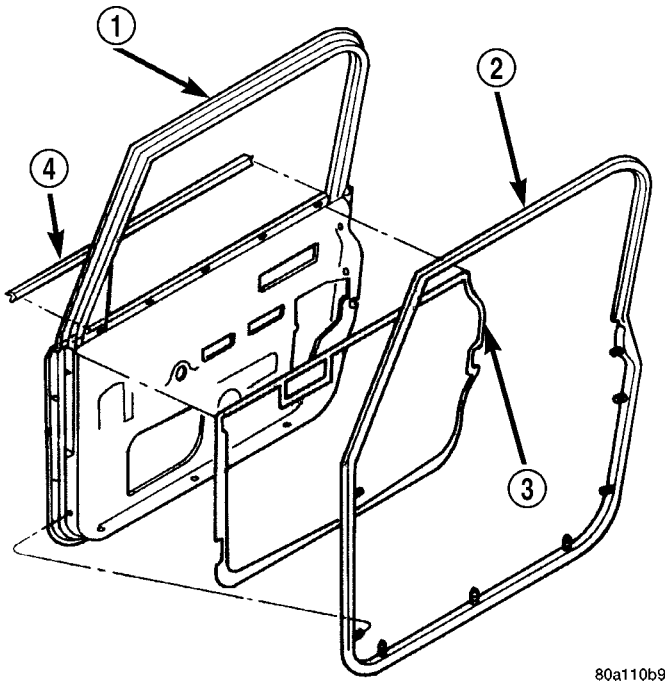

Fig. 3 FULL DOOR WEATHERSTRIP

1 - FULL DOOR
2 - WEATHERSTRIP
3 - WATERDAM
4 - OUTER DOOR BELT SEAL

INSTALLATION

(1) Position the lower part of the weatherstrip and seat the push-in fasteners fully.
(2) Install the weatherstrip in the upper weatherstrip channel seat fully.

HALF DOOR WEATHERSTRIP

REMOVAL

NOTE: The weatherstrip is attached to the door with push-in fasteners.

(1) Remove trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - REMOVAL)
(2) Remove window retaining sleeve.
(3) Remove the push-in fasteners attaching the weatherstrip to the door. (Fig. 4)