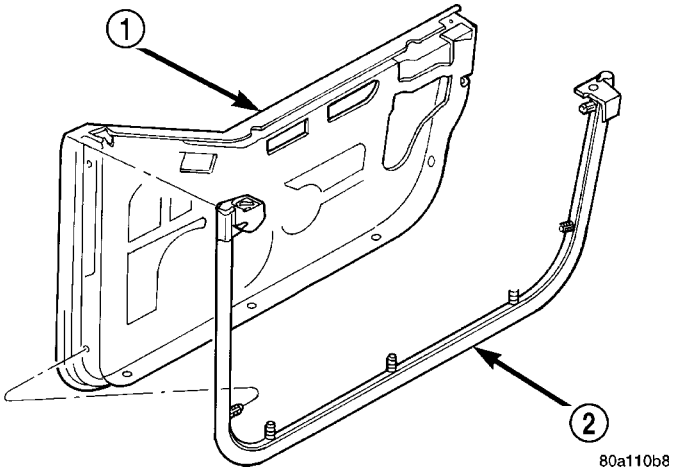

Fig. 4 HALF DOOR WEATHERSTRIP

1 - HALF DOOR
2 - WEATHERSTRIP

INSTALLATION

NOTE: The weatherstrip is attached to the door with push-in fasteners.

(1) Position the weatherstrip onto the door and seat the push-in fasteners fully.
(2) Install window retaining sleeve.
(3) Install trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - INSTALLATION)

TAILGATE WEATHERSTRIP AND CHANNEL

REMOVAL

(1) Open the tailgate.
(2) Remove the push-in fasteners attaching the weatherstrip to the top corners of the tailgate (Fig. 5).
(3) Peel the weatherstrip from the upper tailgate corners.
(4) Slide the weatherstrip out of the tailgate channel.
(5) If the weatherstrip channel requires replacement, peel the weatherstrip channel from the tailgate.

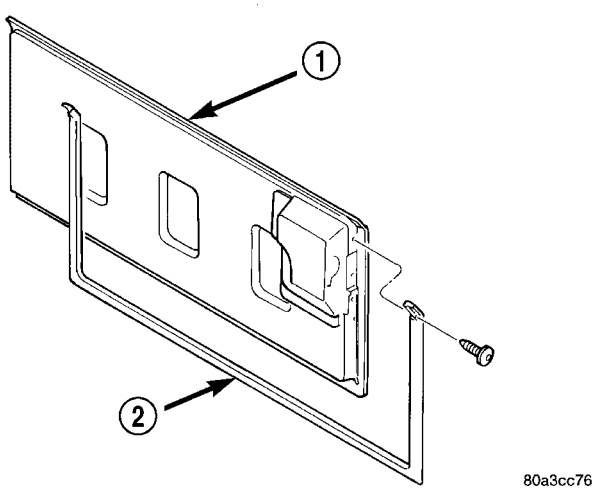

Fig. 5 TAILGATE WEATHERSTRIP

1 - TAILGATE
2 - WEATHERSTRIP

INSTALLATION

(1) If the weatherstrip channel is being replaced;
(a) Clean the channel contact surface on the tailgate with isopropyl alcohol, or equivalent.
(b) Peel the paper backing from the weatherstrip channel.
(c) Install the push pin fasteners attaching the weatherstrip to the tailgate.
(d) Position weatherstrip channel to the tailgate and press into place.
(e) Use hand pressure or a roller to wet out the tape adhesive holding the weatherstrip channel to the tailgate.
(2) Install the push pin fasteners attaching the weatherstrip to the tailgate.
(3) Slide the weatherstrip into the weatherstrip channel.

WINDSHIELD FRAME WEATHERSTRIP

REMOVAL

UPPER (Header)

(1) Disconnect the top from the windshield frame.
(2) Disengage the push-in fasteners attaching the weatherstrip to the windshield frame.
(3) Peel the weatherstrip from the frame.

LOWER

NOTE: The lower windshield frame weatherstrip can be removed with the frame tilted forward to the full horizontal position.