(1) Remove the wiper arms. (Refer to 8 - ELECTRICAL/WIPERS/WASHERS/WIPER ARMS - REMOVAL)
(2) Disconnect the top from the windshield frame.
(3) Remove the cowl grille. (Refer to 23 - BODY/EXTERIOR/COWL GRILLE AND SCREEN - REMOVAL)
(4) Remove the torx screws on each side of the windshield frame allowing the windshield frame to tilt to the full horizontal position.
(5) Disengage the outboard push-in fasteners at the top of cowl on each hinge pillar (Fig. 6).
(6) Remove the weatherstrip from the cowl.

INSTALLATION

UPPER (Header)

(1) Clean the seal contact surface on the windshield frame with isopropyl alcohol or equivalent.

NOTE: Ensure that the contact surface is dry and free from any residue, poor adhesion will result.

(2) Position the weatherstrip on the windshield frame, align the push-in fasteners and press it into place (Fig. 6).
(3) Remove adhesive backing from the bottom of the weatherstrip.
(4) Using forceful hand pressure, seat the adhesive on the contact surface.

NOTE: If tape surface becomes contaminated, it will not adhere to the windshield frame.

(5) Connect the top to the windshield frame.

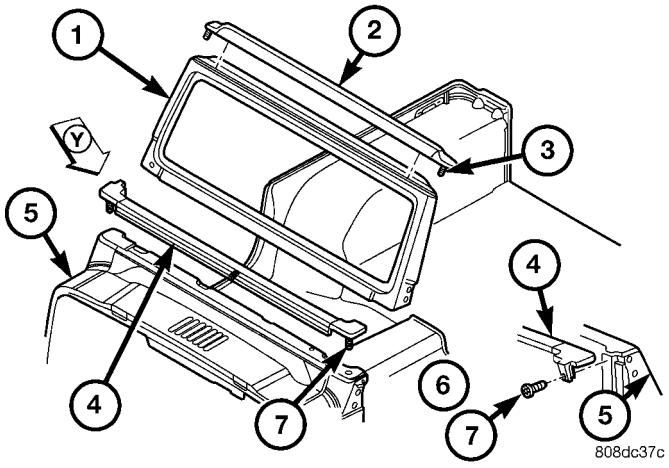

Fig. 6 WINDSHIELD FRAME WEATHERSTRIP

1 - WINDSHIELD FRAME
2 - UPPER HEADER WEATHERSTRIP
3 - PUSH-IN FASTENER
4 - WINDSHIELD TO COWL WEATHERSTRIP
5 - COWL
6 - VIEW OF ARROW Y
7 - PUSH-IN FASTENERS (2 per end)

LOWER

(1) Position the weatherstrip on the cowl.
(2) Align the outer push-in fasteners and press them into place.
(3) Tilt the windshield frame rearward to the full vertical position.

NOTE: Ensure weatherstrip outer detail mates with the a-pillar trim. Outer detail must be flush with trim surface for proper sealing performance.

(4) Install the torx screws on each side of the windshield securing the windshield frame.
(5) Connect the top to the windshield frame.
(6) Install cowl grille. (Refer to 23 - BODY/EXTERIOR/COWL GRILLE AND SCREEN - INSTALLATION)
(7) Install the wiper arms. (Refer to 8 - ELECTRICAL/WIPERS/WASHERS/WIPER ARMS - INSTALLATION)