- **Side Window Demister Outlets** - There are two side window demister outlets, one is located at each outboard end of the instrument panel, above the panel outlets.
- **Panel Outlets** - There are four panel outlets in the instrument panel, one located near each outboard end of the instrument panel facing the rear of the vehicle and two located near the top of the instrument panel center bezel.
- **Front Floor Outlets** - There are two front floor outlets, one located above each side of the floor panel center tunnel near the dash panel.

OPERATION

Both the single zone manual temperature control (MTC) heating-A/C system and the heater-only system are blend-air type systems. In a blend-air heating-A/C system (Fig. 2), a blend-air door controls the amount of conditioned air that is allowed to flow through, or around, the heater core. The temperature control determines the discharge air temperature by operating the blend door actuator, which move the blend-air door. This design allows almost immediate control of output air temperatures.

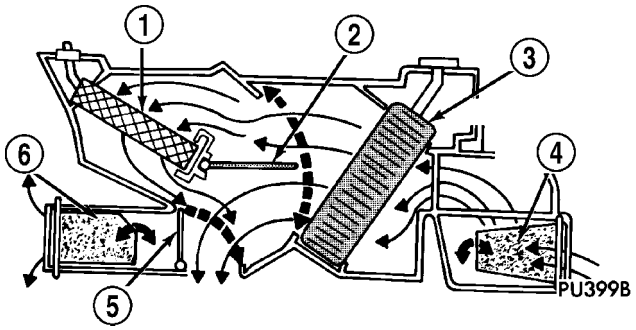

Fig. 2 Typical Blend-Air HVAC System

1 - HEATER CORE
2 - BLEND-AIR DOOR
3 - A/C EVAPORATOR
4 - RECIRCULATION-AIR DOOR
5 - FLOOR MODE-AIR DOOR
6 - PANEL/DEFROST MODE-AIR DOOR

The heating and A/C systems pulls outside (ambient) air through the cowl opening at the base of the windshield, then into the air inlet housing above the heating, ventilation and air conditioning (HVAC) housing. On models equipped with A/C, the air passes through the A/C evaporator. Air flow can be directed either through or around the heater core. This is done by adjusting the blend door with the temperature control knob on the A/C-heater control in the instrument panel. The air flow can then be directed from the panel, floor and defrost outlets in various combinations using the mode control located on the A/C-heater control. Air flow velocity can be adjusted with the blower fan speed control located on the A/C-heater control.

On models equipped with A/C, the outside air intake can be shut off by selecting the Recirculation Mode. This will operate a vacuum actuated recirculating-air door that closes off the fresh air intake and recirculates the air that is already inside the vehicle.

The A/C compressor can be engaged by turning the mode control clockwise from the Off position. It can also be engaged by placing the mode control in the mix to defrost positions. This will remove heat and humidity from the air before it is directed through or around the heater core. The mode control on the A/C-heater control is used to also direct the conditioned air to the selected system outlets. The mode control uses engine vacuum to control the mode-air doors.

The defroster outlet receives airflow from the HVAC housing through the molded plastic defroster duct, which is connected to the HVAC housing defroster outlet. The airflow from the defroster outlet is directed by fixed vanes in the defroster grille and cannot be adjusted.

The side window demisters receive airflow from the HVAC housing through the molded plastic defroster duct, two molded plastic demister ducts and two molded plastic demister outlets. The airflow from the side window demister outlets is directed by fixed vanes in the demister grilles and cannot be adjusted. The demisters direct air from the HVAC housing through the outlets located on the top corners of the instrument panel. The demisters operate when the mode control is positioned in the floor-defrost and defrost-only settings. Some air may be noticeable from the demister outlets when the mode control is in the bi-level to floor positions.

The four instrument panel outlets receive airflow from the HVAC housing through a single molded plastic instrument panel duct. The single instrument panel duct directs airflow to all of the instrument panel outlets. Each of these outlets can be individually adjusted to direct the flow of air.

The floor outlets receive airflow from the HVAC housing through the floor distribution duct. The front floor outlets are integral to the molded plastic floor distribution duct, which is secured to the bottom of the HVAC housing. The floor outlets cannot be adjusted.