## REMOVAL

**NOTE: The compressor clutch can be serviced in the vehicle. The refrigerant system can remain fully-charged during compressor clutch, pulley, or coil replacement.**

(1) Disconnect and isolate the battery negative cable.

(2) Remove the serpentine drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL) and (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(3) Remove the bolt that secures the compressor clutch to the compressor shaft (Fig. 4). A band-type oil filter wrench may be used to secure the clutch during bolt removal.

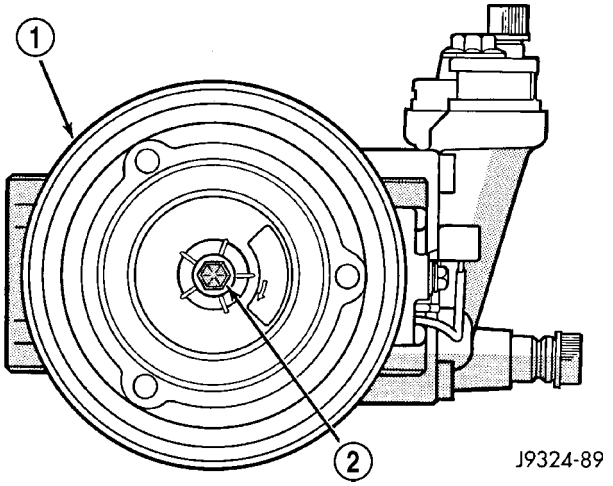



*Fig. 4 A/C Compressor Shaft Bolt*

1 - COMPRESSOR CLUTCH PLATE
2 - COMPRESSOR SHAFT BOLT

(4) Tap the clutch plate with a plastic mallet to release it from the splines on the compressor shaft. Remove the clutch plate and shim(s) from the compressor shaft (Fig. 5).

**NOTE: Use care not to lose any of the shim(s).**

**CAUTION: Do not use screwdrivers between the clutch plate assembly and pulley to remove front plate as this may damage the front plate assembly.**

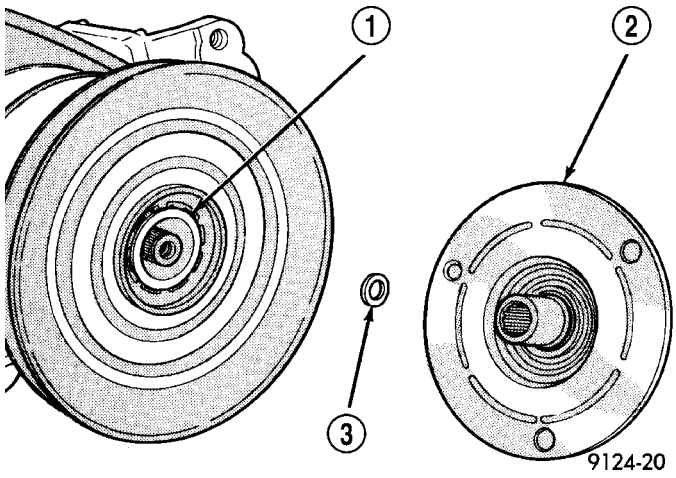



*Fig. 5 Clutch Plate and Shim(s)*

1 - COMPRESSOR SHAFT
2 - CLUTCH PLATE
3 - CLUTCH PLATE SHIM

(5) Remove the external snap ring that secures the compressor clutch pulley to the nose of the compressor front housing with snap ring pliers (Special Tool C-4574) or equivalent and slide the pulley assembly off of the compressor (Fig. 6).

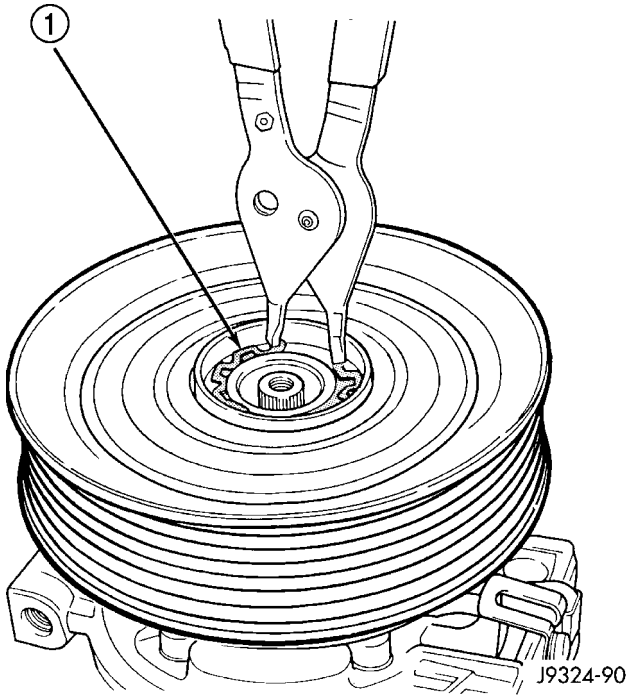



*Fig. 6 Pulley Snap Ring*

1 - SNAP RING

(6) Remove the screw and retainer from the clutch coil lead wire harness on the compressor front housing.

(7) Remove the external snap ring that secures the compressor clutch coil to the nose of the compressor front housing with snap ring pliers and slide the coil assembly off of the compressor (Fig. 7).