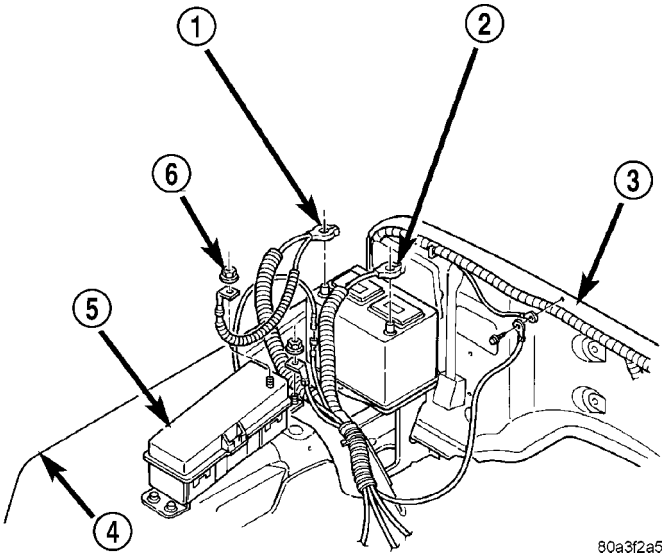

Fig. 10 Power Distribution Center - LHD shown, RHD similar

1 - BATTERY POSITIVE CABLE
2 - BATTERY NEGATIVE CABLE
3 - DASH PANEL
4 - INNER FENDER
5 - POWER DISTRIBUTION CENTER (PDC)
6 - NUT

INSTALLATION

NOTE: Refer to the fuse and relay layout map on the inside of the power distribution center (PDC) cover for A/C clutch relay location.

(1) Position the A/C clutch relay into the receptacle of the PDC.

(2) Align the A/C clutch relay terminals with the terminal cavities in the PDC receptacle and push down firmly on the relay until the terminals are fully seated.

(3) Close the cover of the PDC.

(4) Reconnect the negative battery cable.

A / C - HEATER CONTROL

DESCRIPTION

The A/C-heater control (Fig. 11) for both the manual temperature control (MTC) single zone heating-only and the heating-A/C system allows one temperature setting for the entire vehicle. All controls are identified by ISO graphic symbols.

The A/C-heater control is located in the instrument panel and contains:

- a rotary control knob for blower fan speed selection.
- a rotary control knob for recirculation and mode control of the discharged air.
- a rotary control knob for temperature control of the discharged air and turning the heating-A/C system off.

The A/C-heater control cannot be repaired and, if faulty or damaged, it must be replaced. The blower motor and mode control switch, control knobs and illumination lamps are available for service replacement.

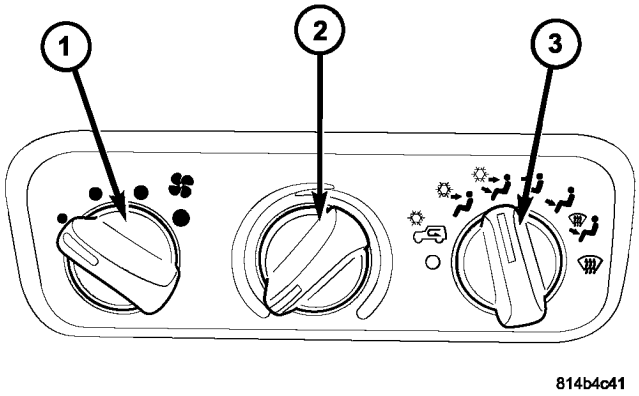

Fig. 11 A/C-Heater Control - Typical

1 - BLOWER SPEED CONTROL
2 - TEMPERATURE SELECT COPNTROL
3 - MODE SELECT CONTROL

DIAGNOSIS AND TESTING

VACUUM CONTROL SYSTEM

Vacuum control is used to operate the mode-air doors within the HVAC housing. Testing the operation of the heating-only and heating-A/C system mode control will determine if the vacuum and mechanical controls are functioning. However, it is possible that a vacuum control system that operates correctly at engine idle (high engine vacuum) may not function properly at high engine speeds or loads (low engine vacuum). This can be caused by leaks within the vacuum system, or a faulty vacuum check valve.

A vacuum system test will help to identify the source of poor vacuum system performance or vacuum system leaks. Before starting this test, stop the engine and make certain that the problem is not a disconnected vacuum supply line at the engine intake manifold vacuum tap or at the vacuum reservoir.

Use an adjustable vacuum test set (Special Tool C-3707-B) and a suitable vacuum pump to test the HVAC vacuum control system. With a finger placed over the end of the vacuum test hose probe (Fig. 12), adjust the bleed valve on the test set gauge to obtain a vacuum of exactly 27 kPa (8 in. Hg.). Release and block the end of the probe several times to verify that the vacuum reading returns to the exact 27 kPa (8 in. Hg.) setting. Otherwise, a false reading will be