obtained during testing.

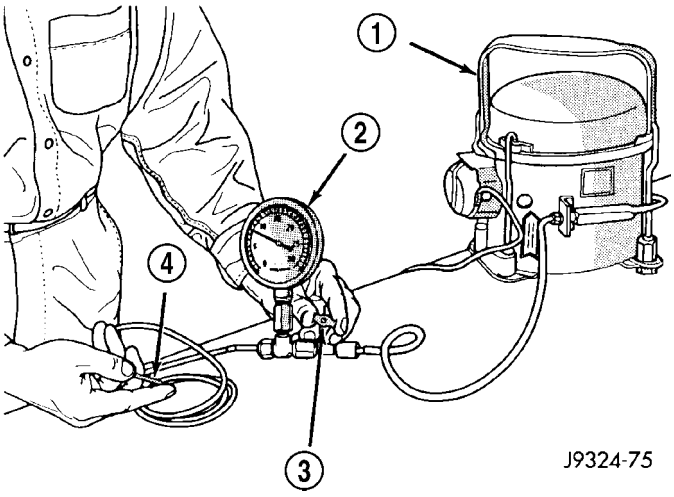

Fig. 12 Adjust Vacuum Test Bleed Valve

1 - VACUUM PUMP TOOL C-4289
2 - VACUUM TEST SET C-3707
3 - BLEED VALVE
4 - PROBE

VACUUM CHECK VALVE

(1) Remove the vacuum check valve. The valve is located in the (black) vacuum supply tube at the intake manifold vacuum tap.

(2) Connect the test set vacuum supply hose to the A/C-heater control side of the vacuum check valve. When connected to this side of the check valve, no vacuum should pass and the test set gauge should return to the 27 kPa (8 in. Hg.) setting. If OK, go to Step 3. If not OK, replace the faulty vacuum check valve.

(3) Connect the test set vacuum supply hose to the engine vacuum side of the vacuum check valve. When connected to this side of the check valve, vacuum should flow through the check valve without restriction. If not OK, replace the faulty vacuum check valve.

A / C HEATER CONTROLS

(1) Connect the test set vacuum probe to the heater-A/C vacuum supply (black) tube in the engine compartment. Position the test set gauge so that it can be viewed from the passenger compartment.

(2) Place the A/C-heater mode control in each mode position, one position at a time, and pause after each selection. The test set gauge should return to the 27 kPa (8 in. Hg.) setting shortly after each selection is made. If not OK, a component or vacuum line in the vacuum circuit of the selected mode has a leak. See the procedure in Locating Vacuum Leaks.

LOCATING VACUUM LEAKS

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

CAUTION: Do not use lubricant on the switch ports or in the holes of the connector, as lubricant will ruin the vacuum valve in the switch. A drop of clean water in the connector holes will help the connector slide onto the switch ports.

(1) Disconnect the vacuum harness connector at the back of the A/C-heater control (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/A/C HEATER CONTROL - REMOVAL).

(2) Connect the test set vacuum hose probe to each port in the vacuum harness connector, one port at a time, and pause after each connection (Fig. 13). The test set gauge should return to the 27 kPa (8 in. Hg.) setting shortly after each connection is made. If OK, replace the faulty mode control switch. If not OK, go to Step 3.

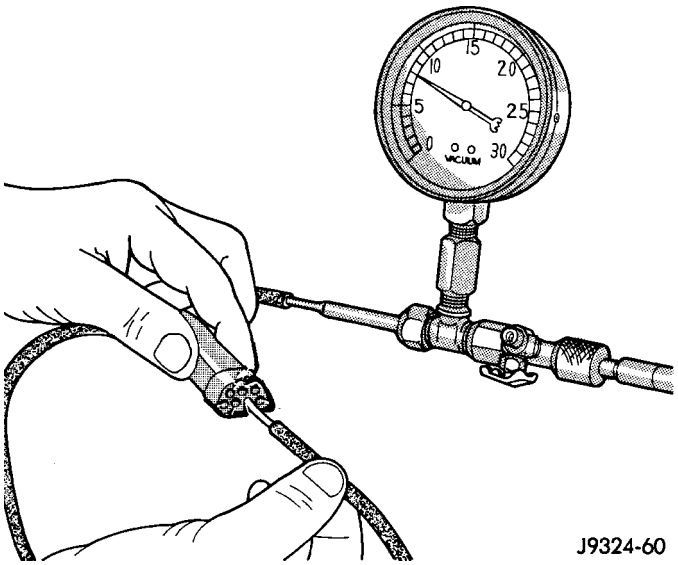

Fig. 13 Vacuum Circuit Test

(3) Determine the vacuum line color of the vacuum circuit that is leaking. To determine the vacuum line colors, refer to the Vacuum Circuit charts (Fig. 14) and (Fig. 15).