A - NOT USED
B - DEFROST ACTUATOR (YELLOW)
C - FLOOR ACTUATOR (BROWN)
D - DEFROST ACTUATOR, MID-POSITION (BLUE)
E - VACUUM SUPPLY, RESERVOIR (BLACK)
F - PANEL ACTUATOR (RED)
G - RECIRCULATION ACTUATOR (GREEN)

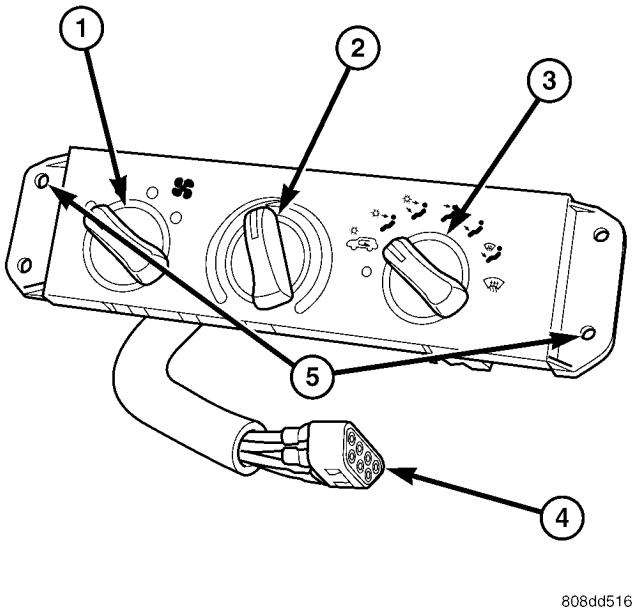

Fig. 16 A/C-Heater Control - Typical

1 - BLOWER MOTOR CONTROL
2 - TEMPERATURE CONTROL
3 - MODE CONTROL
4 - VACUUM HARNESS CONNECTOR
5 - MOUNTING SCREW LOCATIONS

(6) Pull the A/C-heater control away from the instrument panel to access the connections on the back of the control.

(7) Disconnect the three wire harness connectors from the back of the A/C-heater control (Fig. 17) and remove the control from the vehicle.

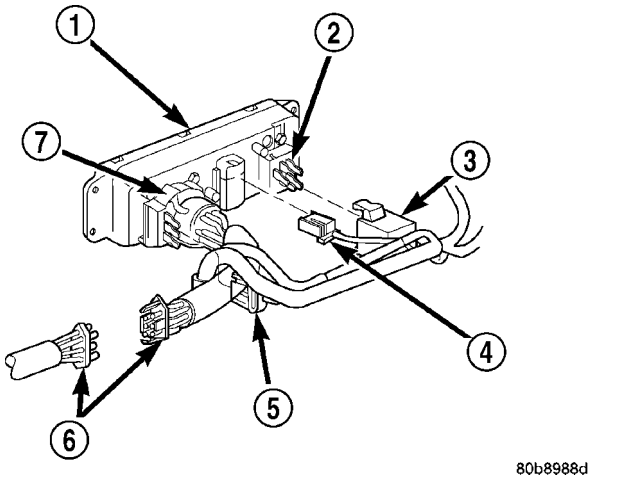

Fig. 17 A/C-Heater Control Connections - Typical

1 - A/C-HEATER CONTROL
2 - BLOWER MOTOR SWITCH
3 - BLOWER MOTOR SWITCH CONNECTOR
4 - TEMPERATURE/ILLUMINATION CONNECTOR
5 - MODE SWITCH CONNECTOR
6 - VACUUM HARNESS
7 - MODE SWITCH

INSTALLATION

(1) Connect the three wire harness connectors to the back of the A/C-heater control.

(2) Position the A/C-heater control onto the instrument panel and install the two retaining screws. Tighten the screws to 2 N·m (17 in. lbs.).

(3) Reach through the glove box opening and connect the A/C-heater vacuum harness connector.

(4) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(5) Install the center bezel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL CENTER BEZEL - INSTALLATION).

(6) Reconnect the negative battery cable.

A / C HIGH PRESSURE SWITCH

DESCRIPTION

The A/C high pressure switch controls A/C compressor clutch engagement and disengagement when equipped with the 4.0L engine. The A/C high pressure switch is mounted on a fitting located on the A/C discharge line near the A/C compressor. The A/C