shaft that connects it to the mode door linkage and three integral mounting tabs that allow it to be secured to the HVAC housing. The blend door actuator requires mechanical indexing to the blend door linkage.

The blend door actuator can be accessed for service from under the instrument panel.

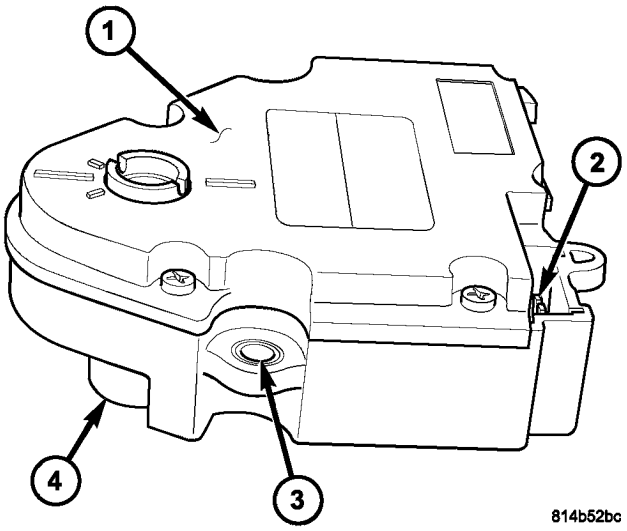

Fig. 22 Blend Door Actuator

1 - BLEND DOOR ACTUATOR
2 - WIRE CONNECTOR RECEPTACLE
3 - MOUNTING TAB (3)
4 - ACTUATOR OUTPUT SHAFT

OPERATION

The blend door actuator is connected to the A/C-heater control through the vehicle electrical system by a dedicated three-wire lead and connector of the HVAC wire harness. The blend door actuator can move the blend-air door in two directions. A potentiometer within the actuator allows the A/C-heater control to know the exact position of the blend-air door at all times.

The blend door actuator can be diagnosed using a DRBIII® scan tool. Refer to Body Diagnostic Procedures for more information.

The blend door actuator cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

NOTE: Prior to performing this procedure, turn the ignition key to the On position and set the A/C-heater control in the mid-temperature position and wait 10 seconds.

(1) Disconnect and isolate the negative battery cable.

(2) Disconnect the wire harness connector from the blend door actuator located at the bottom of the HVAC housing near the center of the instrument panel (Fig. 23).

(3) Remove the three screws that secure the blend door actuator to the HVAC housing and remove the actuator.

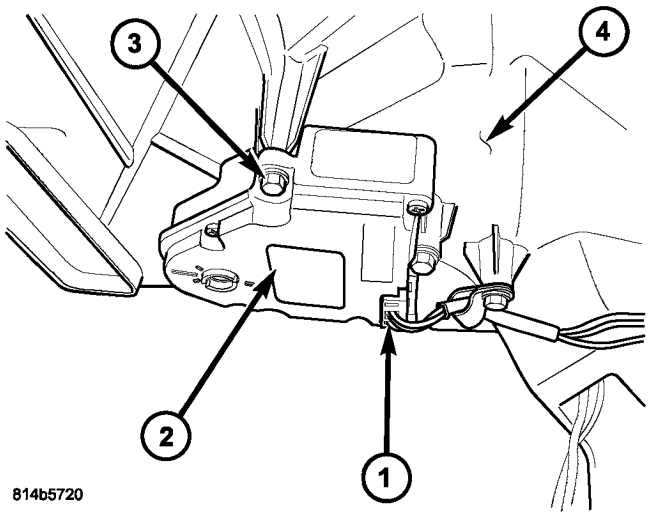

Fig. 23 Blend Door Actuator

1 - WIRE HARNESS CONNECTOR
2 - BLEND DOOR ACTUATOR
3 - SCREWS (3)
4 - HVAC HOUSING

INSTALLATION

(1) Position the blend door actuator onto the bottom of the HVAC housing. If necessary, rotate the actuator slightly to align the actuator output shaft with the blend door linkage.

(2) Install the three screws that secure the blend door actuator to the HVAC housing. Tighten the screws to 2 N·m (17 in. lbs.).

(3) Connect the HVAC wire harness connector to the blend door actuator.

(4) Reconnect the battery negative cable.