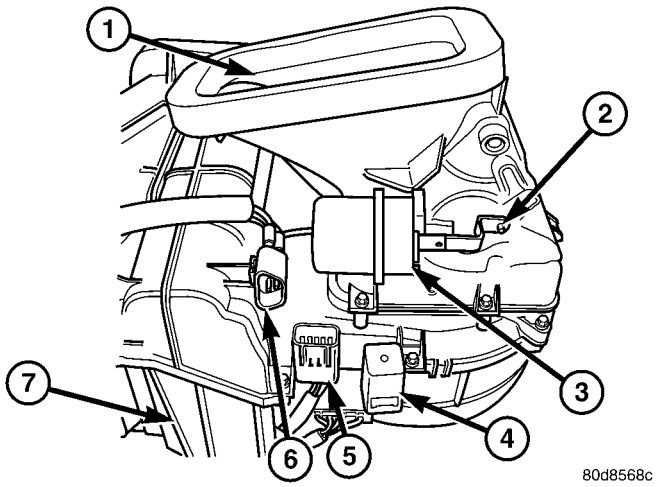

Fig. 25 Blower Motor Relay - LHD shown, RHD similar

1 - AIR INTAKE
2 - RECIRCULATION DOOR LINKAGE
3 - RECIRCULATION DOOR ACTUATOR
4 - BLOWER MOTOR RELAY
5 - HVAC ELECTRICAL CONNECTOR
6 - HVAC VACUUM CONNECTOR
7 - HVAC HOUSING

INSTALLATION

(1) Align the blower motor relay terminals with the terminal cavities in the wire harness connector.

(2) Push down firmly on the blower motor relay until the terminals are fully seated in the connector receptacles.

(3) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(4) Reconnect the negative battery cable.

BLOWER MOTOR RESISTOR

DESCRIPTION

The blower motor resistor (Fig. 26) is mounted to the rear of the HVAC housing, near the glove box. The blower motor resistor consists of a molded plastic mounting plate with an integral wire connector receptacle. Concealed behind the mounting plate is the resistor circuit board.

The blower motor resistor can be accessed for service from under the instrument panel.

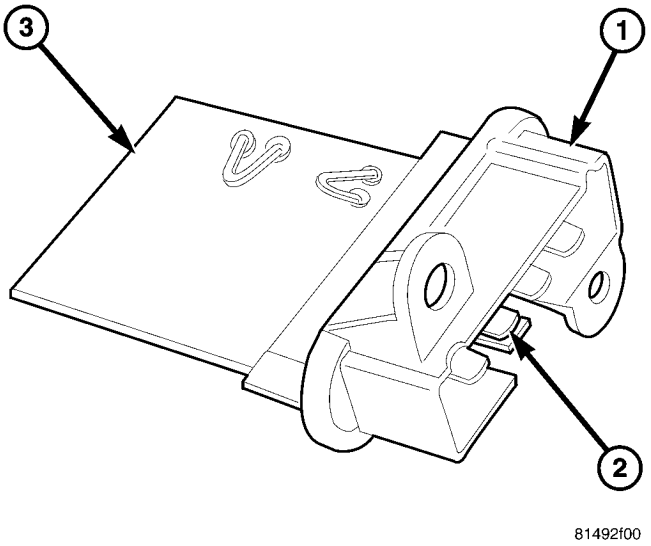

Fig. 26 Blower Motor Resistor

1 - MOUNTING PLATE
2 - WIRE HARNESS CONNECTOR
3 - RESISTOR CIRCUIT BOARD

OPERATION

The blower motor resistor is connected to the vehicle electrical system through a dedicated wire lead and connector of the HVAC wire harness. The blower motor resistor has multiple resistor circuits, each of which will reduce the current flow through the blower motor to change the blower motor speed.

The blower motor switch in the MTC heating-A/C system directs the ground path for the blower motor through the correct resistor circuit to obtain the selected speed. With the blower motor control in the lowest speed position, the ground path for the blower motor is applied through all of the resistor circuits. Each higher speed selected with the blower motor control applies the blower motor ground path through fewer of the resistor circuits, increasing the blower motor speed. When the blower motor control is in the highest speed position, the blower motor resistor is bypassed and the blower motor receives a direct path to ground.

The blower motor resistor cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.