DIAGNOSIS AND TESTING

BLOWER MOTOR RESISTOR

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

NOTE: For circuit descriptions and diagrams, refer to the appropriate wiring information. The wiring information includes wiring diagrams, proper wire and connector repair procedures, further details on wire harness routing and retention, as well as pinout and location views for the various wire harness connectors, splices and grounds.

(1) Disconnect and isolate the negative battery cable.

(2) Disconnect the wire harness connector from the blower motor resistor (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/BLOWER MOTOR RESISTOR - REMOVAL).

(3) Using an ohmmeter, check for continuity between all of the blower motor resistor terminals. In each case there should be continuity. If OK, repair the wire harness circuits between the blower motor switch and the blower motor resistor or blower motor as required. If not OK, replace the faulty blower motor resistor.

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

WARNING: The blower motor resistor may get very hot during normal operation. If the blower motor was turned on prior to servicing the blower motor resistor, wait five minutes to allow the blower motor resistors to cool before performing diagnosis or service. Failure to take this precaution can result in possible personal injury.

(1) Disconnect and isolate the negative battery cable.

(2) Remove the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - REMOVAL).

(3) Unlock the blower motor resistor wire harness connector and disconnect the connector from the blower motor resistor (Fig. 27).

(4) Reach through the glove box opening and remove the upper screw that secures the blower motor resistor to the HVAC housing.

(5) From under the instrument panel, remove the lower screw that secures the blower motor resistor to the HVAC housing and remove the resistor.

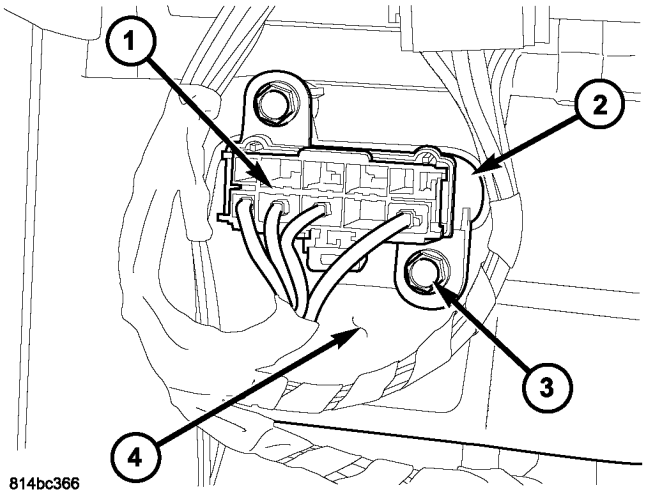

Fig. 27 Blower Motor Resistor-R and I

1 - WIRE HARNESS CONNECTOR
2 - BLOWER MOTOR RESISTOR
3 - SCREW (2)
4 - HVAC HOUSING

INSTALLATION

(1) From under the instrument panel, position the blower motor resistor into the HVAC housing.

(2) From under the instrument panel, install the lower screw that secures the blower motor resistor to the HVAC housing. Tighten the screw to 2 N·m (17 in. lbs.).

(3) Reach through the glove box opening and install the upper screw that secures the blower motor resistor to the HVAC housing. Tighten the screw to 2 N·m (17 in. lbs.).

(4) Connect the wire harness connector to the blower motor resistor and engage the connector lock.

(5) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(6) Reconnect the negative battery cable.