(3) Remove the A/C-heater control from the instrument panel (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/A/C HEATER CONTROL - REMOVAL).

(4) Remove the screw that secures the blower motor switch to the rear of the A/C-heater control (Fig. 29).

(5) Remove the blower motor switch from the A/C-heater control.

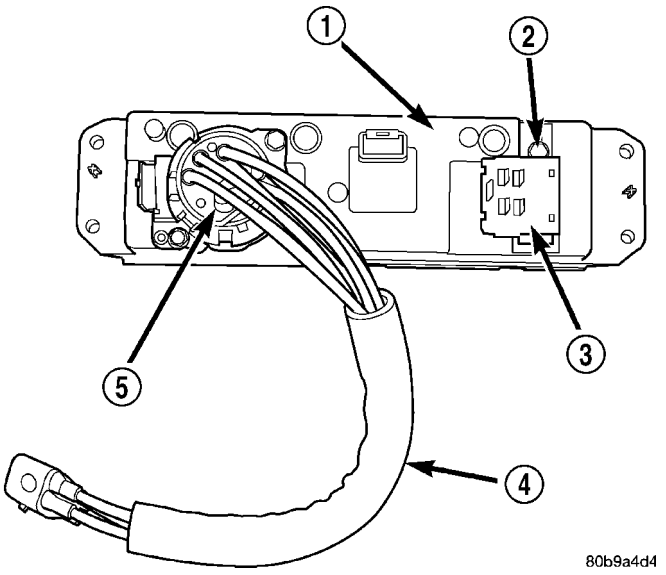

Fig. 29 Blower Motor Switch

1 - A/C-HEATER CONTROL
2 - SCREW
3 - BLOWER MOTOR SWITCH
4 - VACUUM HARNESS
5 - MODE CONTROL SWITCH

INSTALLATION

(1) Position the blower motor switch onto the rear of the A/C-heater control.

(2) Install the screw that secures the blower motor switch to the A/C-heater control. Tighten the screw to 2 N·m (17 in. lbs.).

(3) Install the A/C-heater control (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/A/C HEATER CONTROL - INSTALLATION).

(4) Install the blower motor switch knob onto the switch stem on the front of the A/C-heater control.

(5) Reconnect the negative battery cable.

MODE DOOR ACTUATORS

DESCRIPTION

Both the heating-only system and the heating-A/C system use two vacuum operated mode door actuators to control the movement of the mode-air doors within the HVAC housing (Fig. 30).

When vacuum is supplied by the A/C-heater control to one side of the defrost/floor actuator or the panel door actuator, the actuator rod is pulled into the actuator, which moves the mode door lever and mode-air door in one direction. When vacuum is supplied by the A/C-heater control to the other side of the actuator, the rod moves the mode-air door in the other direction.

The mode door actuators can be accessed for service from under the left side of the instrument panel.

The mode door actuators cannot be adjusted or repaired and, if faulty or damaged, they must be replaced.

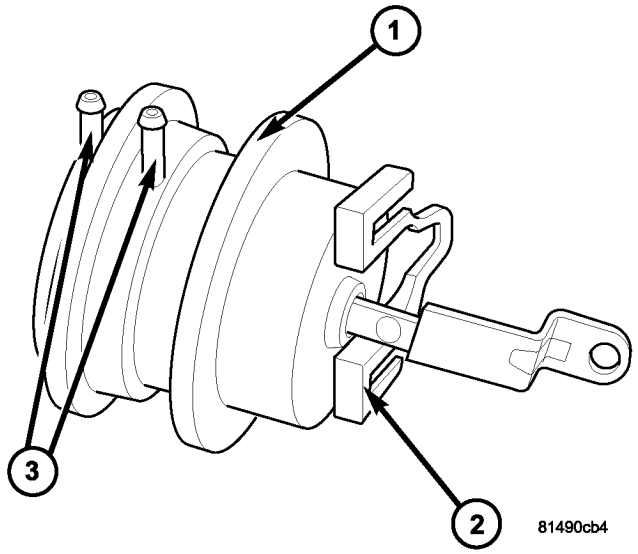

Fig. 30 Vacuum Operated Mode Door Actuator - Typical

1 - MODE DOOR ACTUATOR
2 - MOUNTING PROVISION
3 - VACUUM LINE CONNECTORS

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

FLOOR / DEFROST DOOR ACTUATOR

(1) Disconnect and isolate the negative battery cable.

(2) Remove the knee blocker from the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/KNEE BLOCKER - REMOVAL).

(3) Disconnect the vacuum harness from the floor/defrost door actuator (Fig. 31).