(4) Remove the push-nut that secures the actuator rod to the floor/defrost door lever.

(5) Using a small flat bladed tool, gently pry the actuator latch while pulling firmly outwards on the floor/defrost door actuator. Rotate and tilt the actuator as required to remove the actuator from the HVAC housing mount.

(6) Disengage the actuator rod from the floor/defrost door lever and remove the actuator.

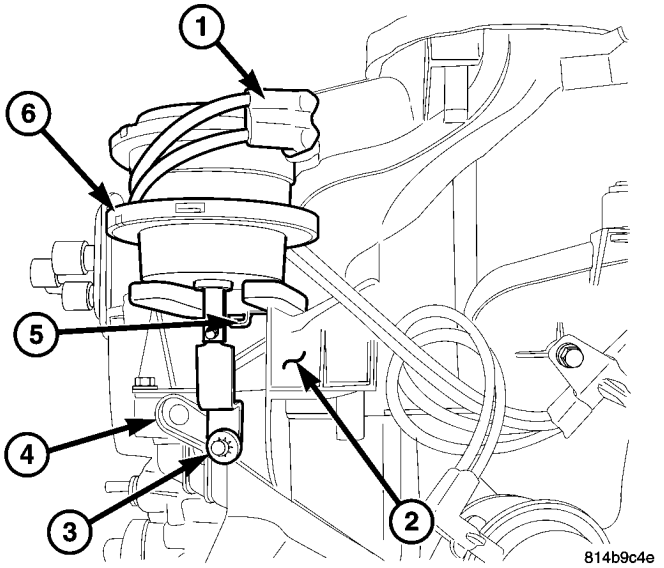

Fig. 31 Floor/Defrost Door Actuator

1 - VACUUM HARNESS
2 - HVAC HOUSING
3 - PUSH-NUT
4 - FLOOR/DEFROST DOOR LEVER
5 - ACTUATOR LATCH
6 - FLOOR/DEFROST (MODE) DOOR ACTUATOR

PANEL DOOR ACTUATOR

(1) Remove the airbag control module (Refer to 8 - ELECTRICAL/RESTRAINTS/AIRBAG CONTROL MODULE - REMOVAL).

(2) Remove the floor distribution duct (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/FLOOR DISTRIBUTION DUCT - REMOVAL).

(3) Disconnect the vacuum harness from the panel door actuator (Fig. 32).

(4) Using a small flat bladed tool, gently pry the actuator latch while pulling firmly outwards on the panel door actuator. Rotate and tilt the actuator as required to remove the actuator from the HVAC housing mount.

(5) Using needle nose pliers, disengage the actuator rod from the push-pin type retainer located on the panel door lever and remove the actuator.

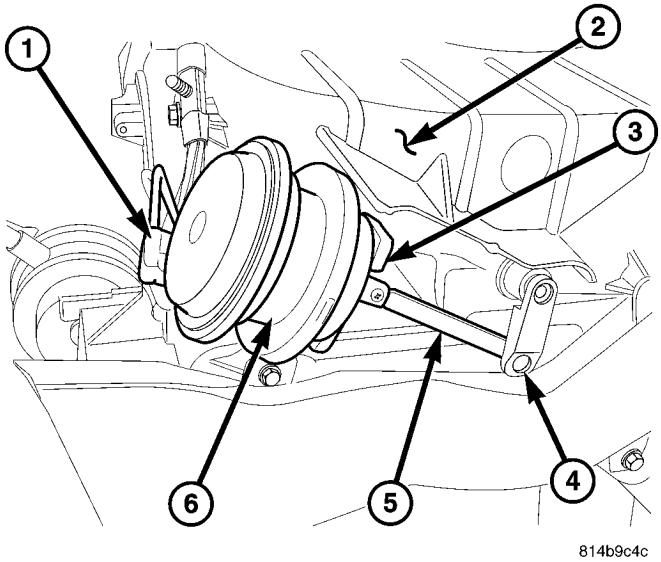

Fig. 32 Panel Door Actuator

1 - VACUUM HARNESS
2 - HVAC HOUSING
3 - ACTUATOR LATCH
4 - PANEL DOOR LEVER
5 - ACTUATOR ROD
6 - PANEL (MODE) DOOR ACTUATOR

INSTALLATION

FLOOR / DEFROST DOOR ACTUATOR

(1) Rotate and tilt the floor/defrost door actuator as required to install the actuator mount onto the HVAC housing mounting boss. Push the actuator onto the mount until it snaps into the locked position.

(2) Engage the actuator rod to the floor/defrost door lever and install the push-nut.

(3) Connect the vacuum harness to the floor/defrost door actuator.

(4) Install the knee blocker onto the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/KNEE BLOCKER - INSTALLATION).

(5) Reconnect the negative battery cable.

PANEL DOOR ACTUATOR

(1) Using needle nose pliers, engage the actuator rod to the push-pin type retainer located on the panel door lever.

(2) Rotate and tilt the panel door actuator as required to install the actuator mount onto the HVAC housing mounting boss. Push the actuator onto the mount until it snaps into the locked position.

(3) Connect the vacuum harness to the panel door actuator.

(4) Install the floor distribution duct (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/FLOOR DISTRIBUTION DUCT - INSTALLATION).